




HZ Series

曲臂式高空作业平台

HZ210A

HZ210AI

配件手册

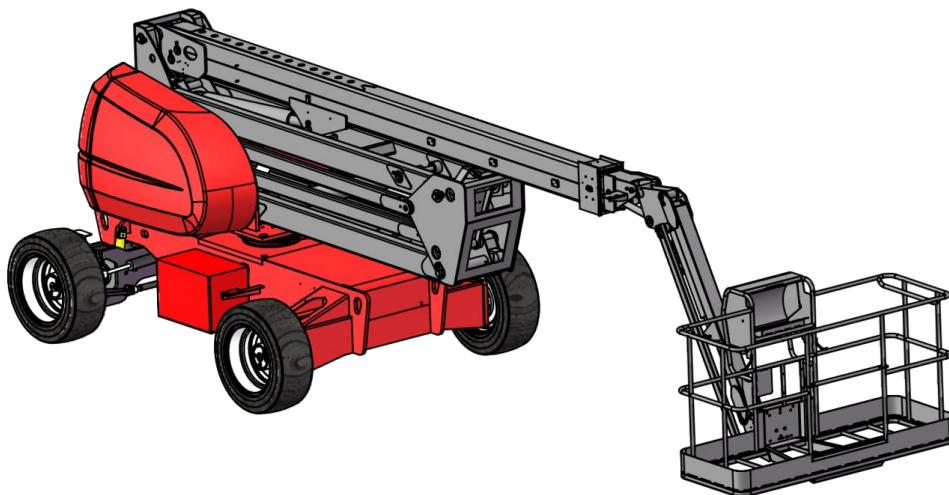

杭叉集团股份有限公司

2022 年 12 月

目录

第一章 底盘	1-1
图 1-1 前桥总成与车架装配	1-2
图 1-2 前桥总成	1-4
图 1-3 箱体与车架装配	1-7
第二章 转台	2-1
图 2-1 车身转动架与底盘总成装配	2-2
图 2-2 配重块与车身转动架装配	2-4
图 2-3 转台总成	2-6
图 2-4 转台总成（二）	2-9
第三章 臂架	3-1
图 3-1 臂架与车身转动架装配	3-2
图 3-2 曲臂总成	3-4
图 3-3 上关节与上臂装配	3-7
图 3-4 上臂与伸缩臂装配	3-9
图 3-5 上臂与伸缩臂装配（二）	3-11
图 3-6 小臂与起升臂总成装配	3-13
图 3-7 小臂总成	3-15
第四章 工作平台	4-1
图 4-1 工作平台与小臂总成装配	4-2
图 4-2 工作平台总成	4-4
第五章 液压系统	5-1
图 5-1 液压油路	5-2

图 5-2 油箱总成	5-5
图 5-3 浮动油缸组件	5-7
图 5-4 下臂油缸组件	5-9
图 5-5 上臂油缸组件	5-11
图 5-6 伸缩臂油缸组件	5-13
图 5-7 上调平油缸组件	5-15
图 5-8 摆臂油缸组件	5-17
第六章 电气系统	6-1
图 6-1 线束总成	6-2
图 6-2 油泵驱动器总成	6-6
图 6-3 保险丝总成	6-8
图 6-4 下控总成	6-10
图 6-5 上控总成	6-12
第七章 标识	7-1
图 7-1 标识	7-2

第一章 底盘

图 1-1 前桥总成与车架装配

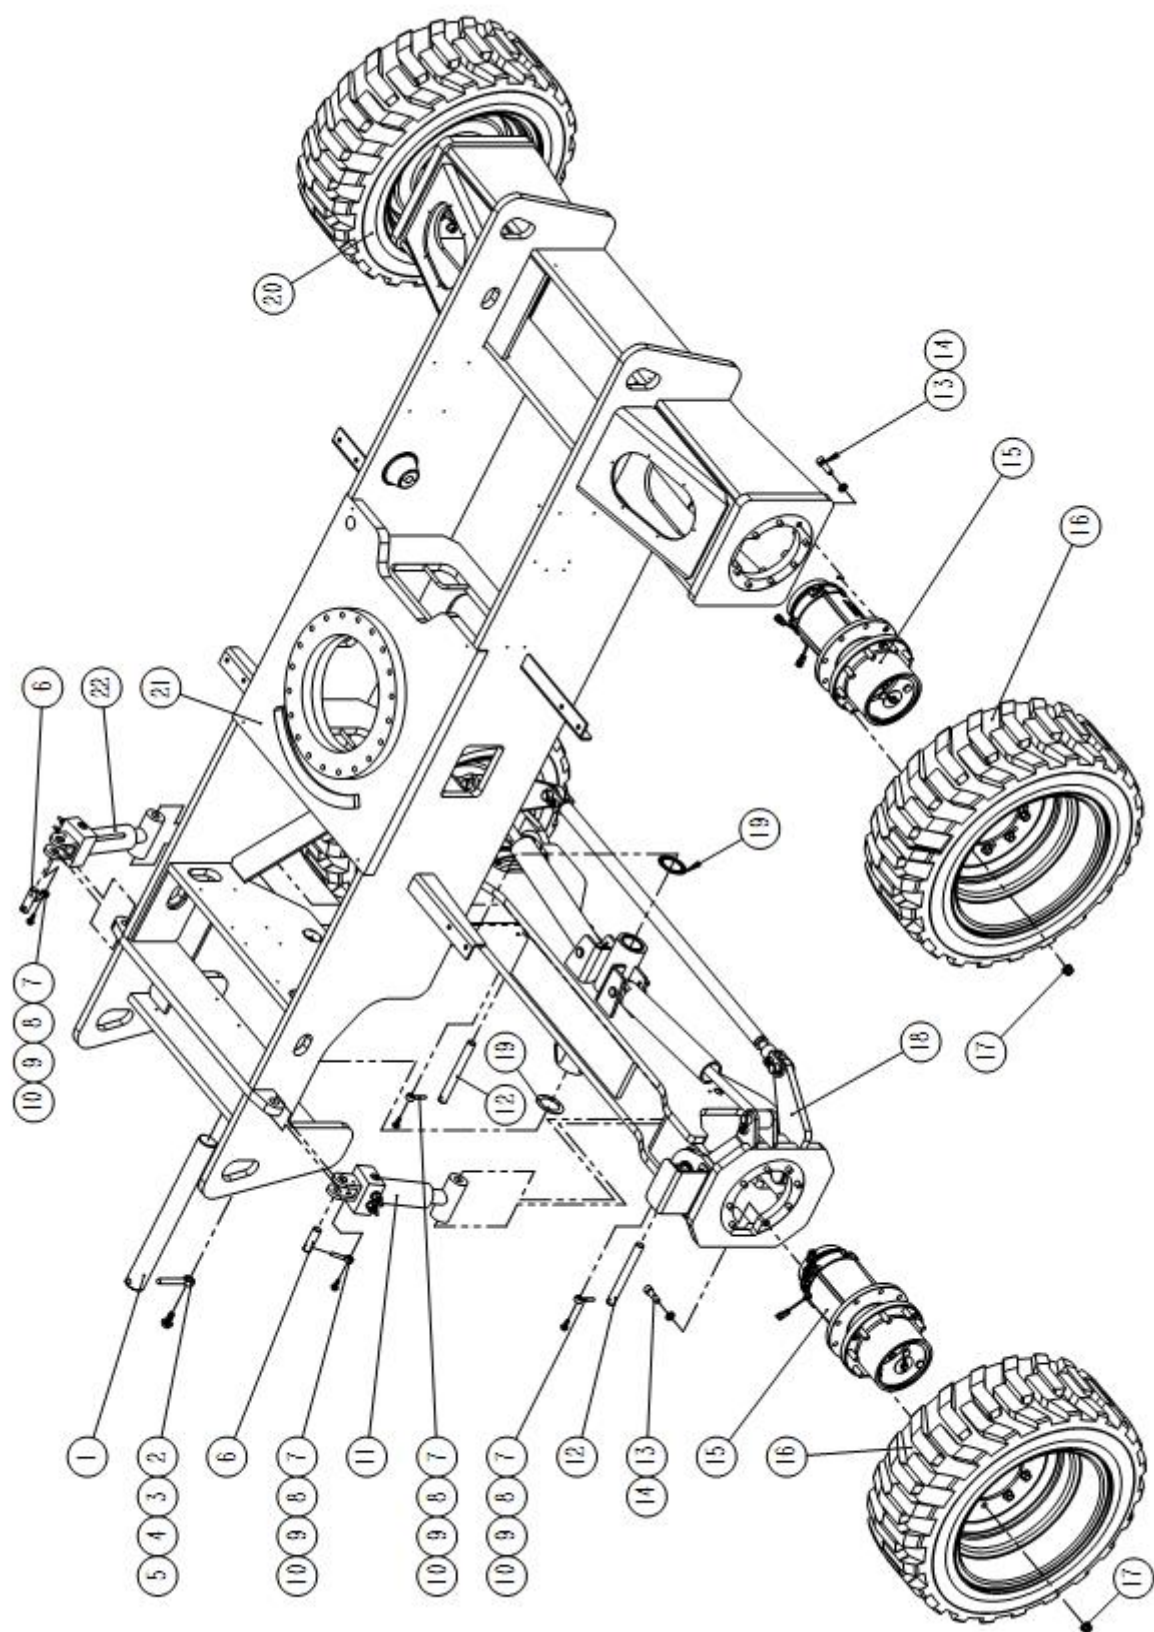


图 1-1 前桥总成与车架装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-400019-000	销轴 60545	1		224000050014
2	GTHZ210C-200007-000	销轴 16120	1		222100030027
3	GB5789-86	螺栓 M16×35	1	8.8	300010080013
4	GB93-87	垫圈 16	1		300030010004
5	GB97.1-85	垫圈 16	1		300030040005
6	GTHZ210C-400018-000	销轴 25068	2		224000050013
7	GTHZ210C-200006-000	销轴 10060	2		222100030026
8	GB5789-86	螺栓 M10×25	4	8.8	300010080001
9	GB93-87	垫圈 10	4		300030010001
10	GB97.1-85	垫圈 10	4		300030040002
11		左浮动油缸组件	1	详见图 5-3	
12	GTHZ210C-200012-000	销轴 25213	2		222100030031
13	GTHZ170-130001-000	螺钉 5/8-11×2 1/4”	32		221300020001
14	GB7244-87	垫圈 16	32		300030090003
15	GTHZ210C-130000-G00	行走减速器	4		221300000006
16	GTHZ210C-110000-G00	左侧轮胎	2		221100020007
17	GTHZ170C-110002-000	轮胎螺母	36		
18	GTHZ210C-200000-000	前桥总成	1		220010020015
19	CT-606260-G00	自润滑垫圈 60	2		229000070020
20	GTHZ210C-120000-G00	右侧轮胎	2		221100020008
21	GTHZ210C-410000-000	车架	1		224100000046
22		右浮动油缸组件	1	详见图 5-3	

图 1-2 前桥总成

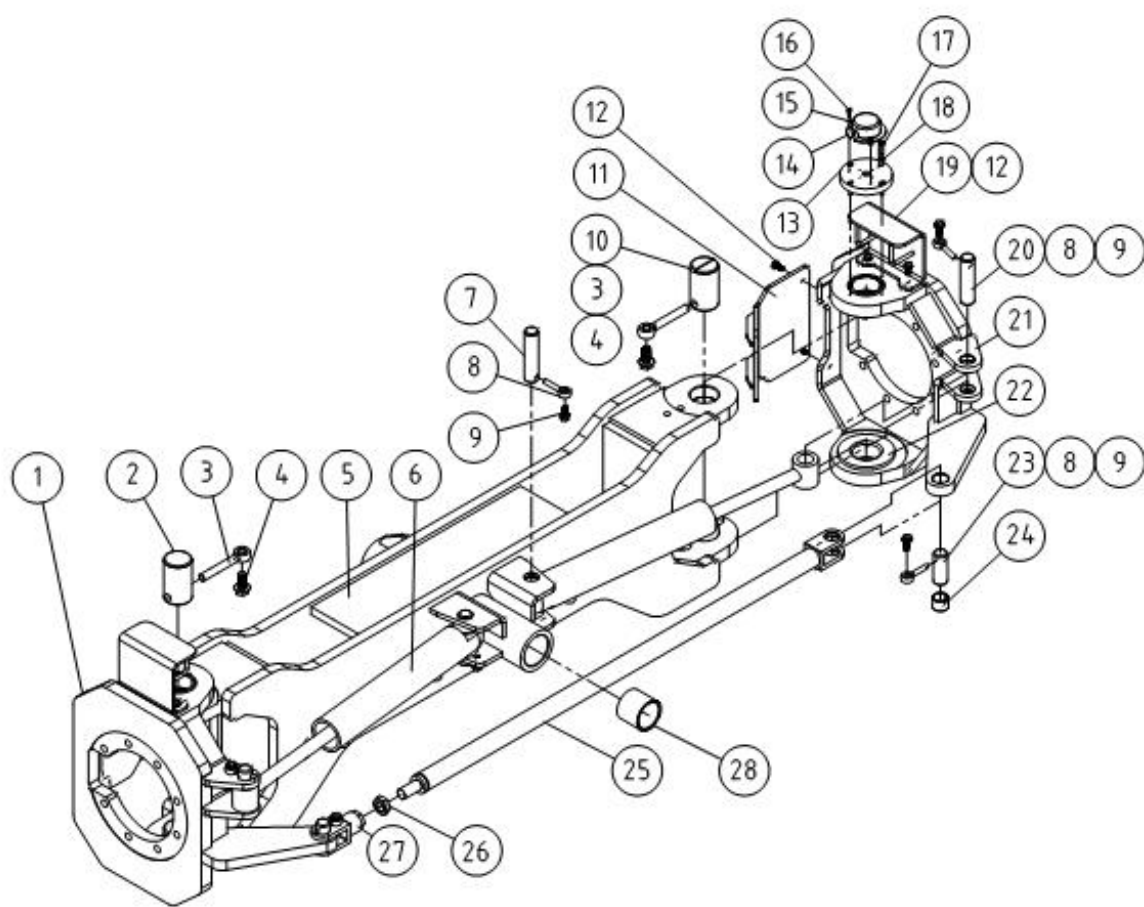


图 1-2 前桥总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-210200-000	左转向节焊体	1		222100000032
2	GTHZ210C-200001-000	销轴 60085	3		222100030022
3	GTHZ210C-200007-000	销轴 16120	4		222100030027
4	GB5789-86	螺栓 M16×35	4	8.8	300010080013
5	GTHZ210C-210100-000	前桥焊件	1		222100000031
6	GTHZ210C-620100-000	转向油缸	2		226200020009
7	GTHZ210C-200010-000	销轴 30110	2		222100030030
8	GTHZ210C-200006-000	销轴 10060	8		222100030026
9	GB/T5789-1986	螺栓 M10×25	8		300010080001
10	GTHZ210C-200002-000	转向上连接轴	1		222100030023
11	GTHZ210C-200200-000	挡板焊件	2		222100000077
12	GB/T5789-1986	螺栓 M8×20	8	8.8	300010080025
13	GTHZ210C-200004-000	转向传感器固定座	1		222100030025
14	GTHZ210C-200005-000	转向传感器护罩	1		222100020019
15	GB93-87	垫圈 5	3		300030010013
16	GB70-85	螺钉 M5×12	3	8.8	300040020127
17	GB70-85	螺钉 M6×25	4	8.8	300040020157
18	GB93-87	垫圈 6	4		300030010014
19	GTHZ210C-200100-000	走线支架	2		222100000030
20	GTHZ210C-200009-000	销轴 30100	2		222100030029
21	GTHZ210C-210300-000	右转向节焊体	1		222100000033
22	GTHZ210C-200011-000	翻边轴套	4		222100060005
23	GTHZ210C-200008-000	销轴 30060	2		222100030028
24	CT-113025-G00	衬套 3025	2		222100060006
25	GTHZ210C-210400-000	转向拉杆	1		222100000034

图 1-2 前桥总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
26	GB6173-86	螺母 M24×2	1	8	300020040012
27	GTHZ210C-210500-000	连接座	1		222100000035
28	CT-526060-G00	纤维衬套	2		222100060007

图 1-3 箱体与车架装配

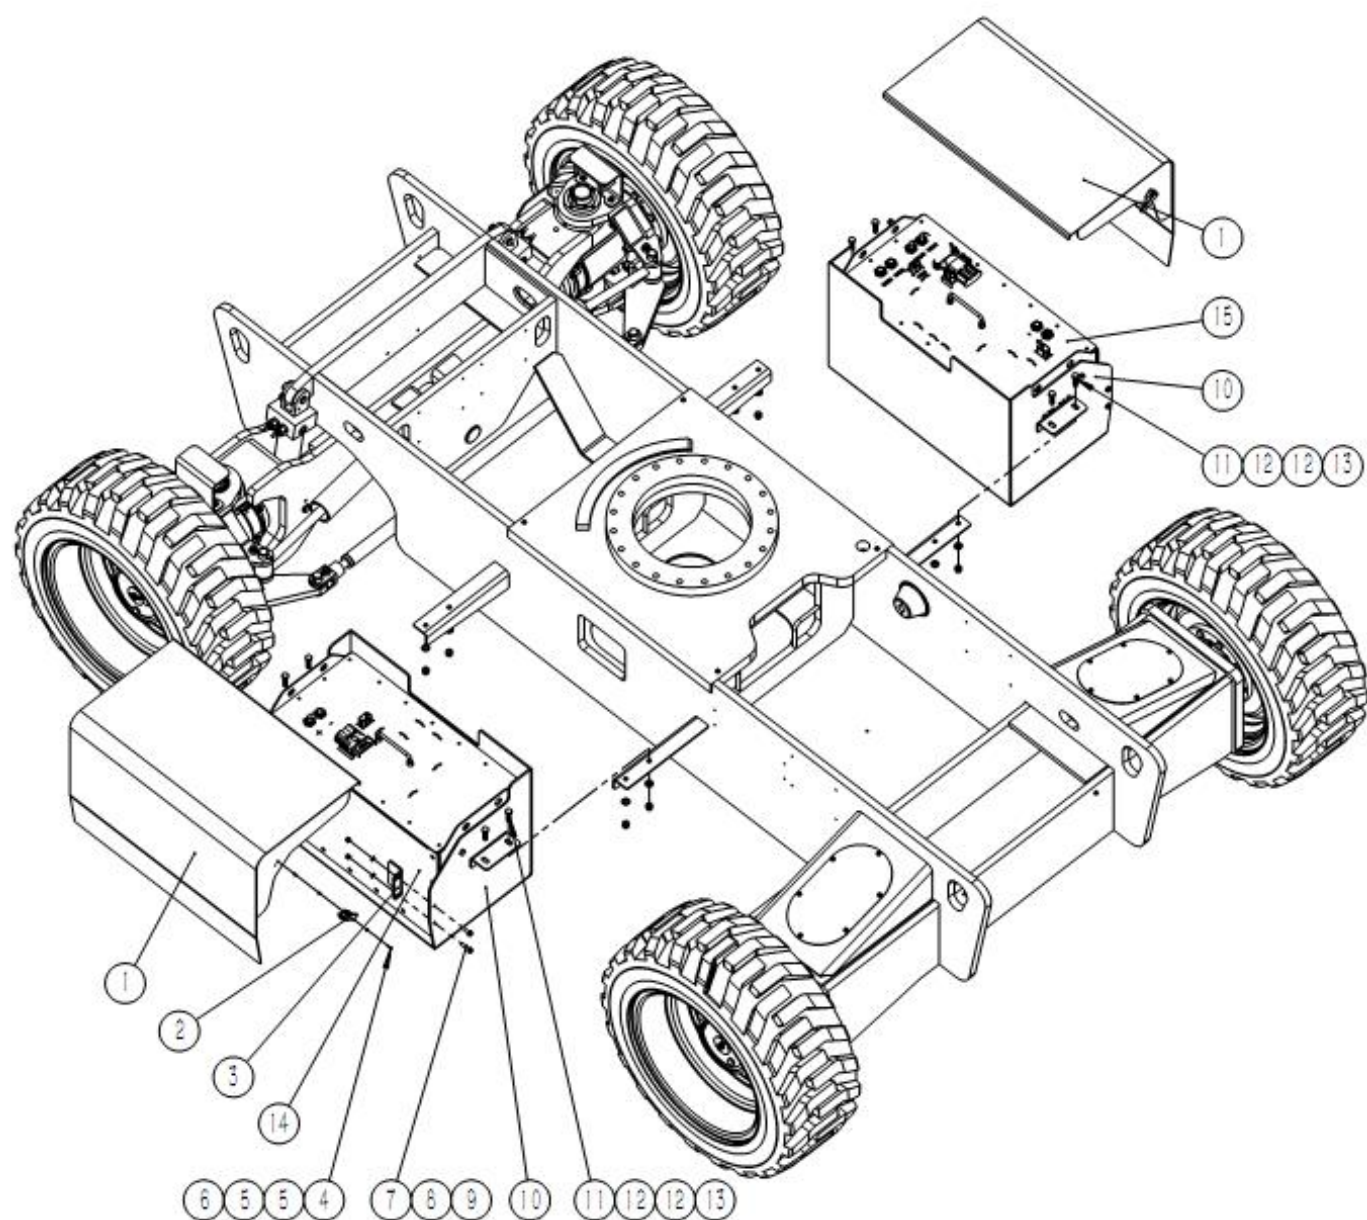


图 1-3 箱体与车架装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-401100-000	电池箱罩板	2		2240000000085
2	GTHZ120-402500-G00	锁扣	4		2240001000002
3	GTHZ210C-400028-000	电瓶挡板	4		224000040223
4	GB5783-86	螺栓 M4×12	8	8.8	300010040128
5	GB97.1-85	垫圈 4	16		300030040011
6	GB889-86	螺母 M4	8		300020150008
7	GB5789-86	M8×30	8	8.8	300010080005
8	GB97.1-85	垫圈 8	8		300030040014
9	GB889-86	螺母 M8	8	8	300020150004
10	GTHZ210C-401000-000	电池箱体	2		2240000000084
11	GB5783-86	螺栓 M12×40	8	8.8	300010040037
12	GB97.1-85	垫圈 12	16		300030040003
13	GB889-86	螺母 M12	8	8	300020150006
14	GTHZ210C-760100-000	左电池箱总成	1		227600030007
15	GTHZ210C-760200-000	右电池箱总成	1		227600030006
16				选配	
17				选配	
18				选配	
19				选配	
20				选配	
21				选配	

图 1-4 底盘总成（一）

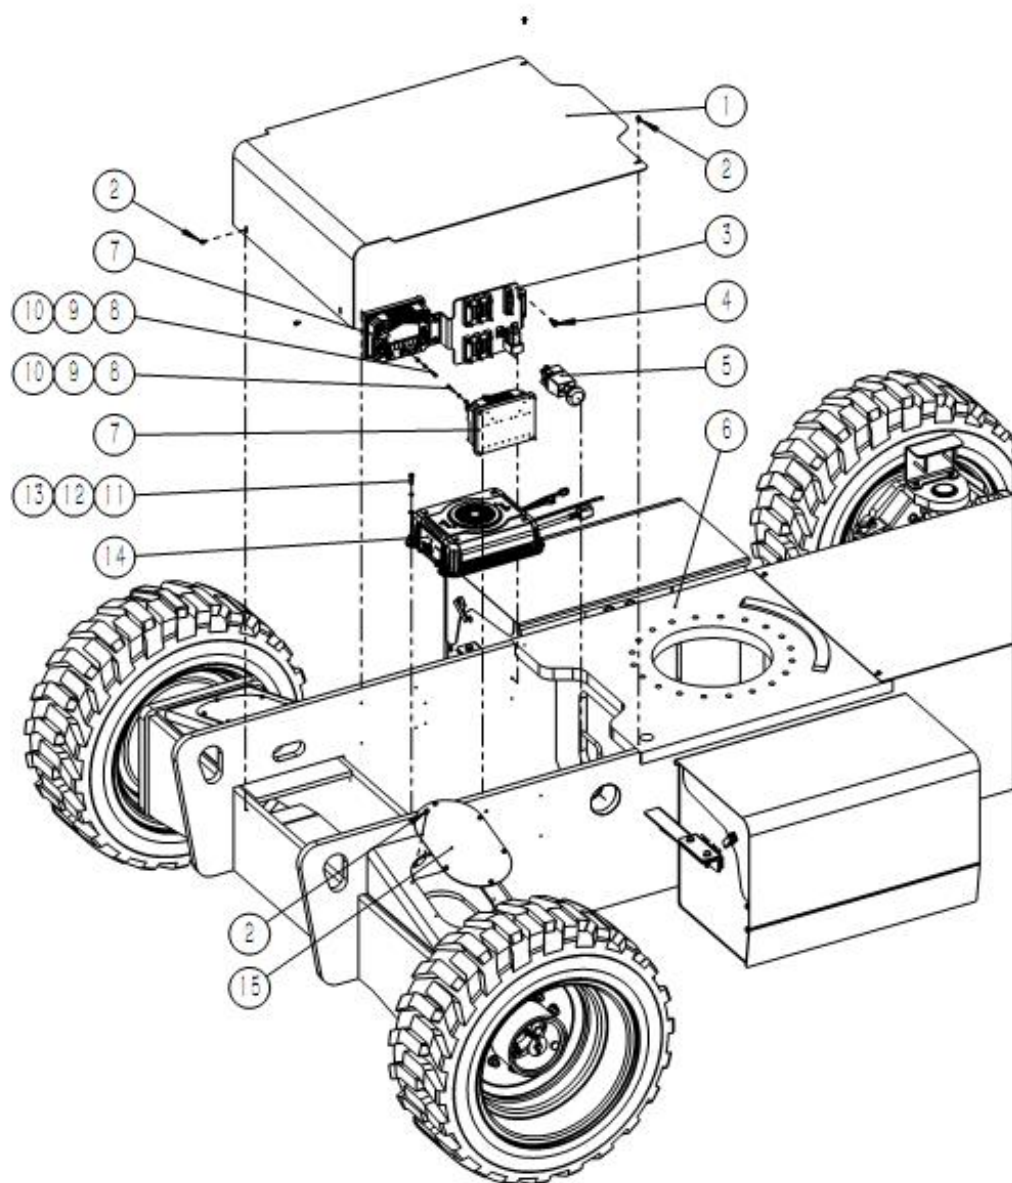


图 1-4 底盘总成（一）

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-400001-000	后罩板	1		224000040119
2	GB5789-86	螺栓 M6×12	16	8.8	300010080014
3		保险丝总成	1	详见图 6-3	
4	GB5789-86	螺栓 M8×25		8.8	300010080026
5	GTHZ170C-750100-G00	断电开关	1		227200010003
6	GTHZ210C-410000-000	车架	1		224100000046
7	GTHZ210C-750200-G00	驱动器	2		227500020005
8	GB70-85	螺钉 M6×30	8	8.8	300040020126
9	GB93-87	垫圈 6	8		300030010014
10	GB97.1-85	垫圈 6	8		300030040013
11	GB70-85	螺钉 M8×25	4	8.8	300040020098
12	GB93-87	垫圈 8	4		300030010015
13	GB97.1-85	垫圈 8	4		300030040014
14	GTHZ210C-750700-G00	充电器(大)	1		227800010008
15	GTHZ210C-400003-000	盖板	2		224000030061

图 1-5 底盘总成（二）

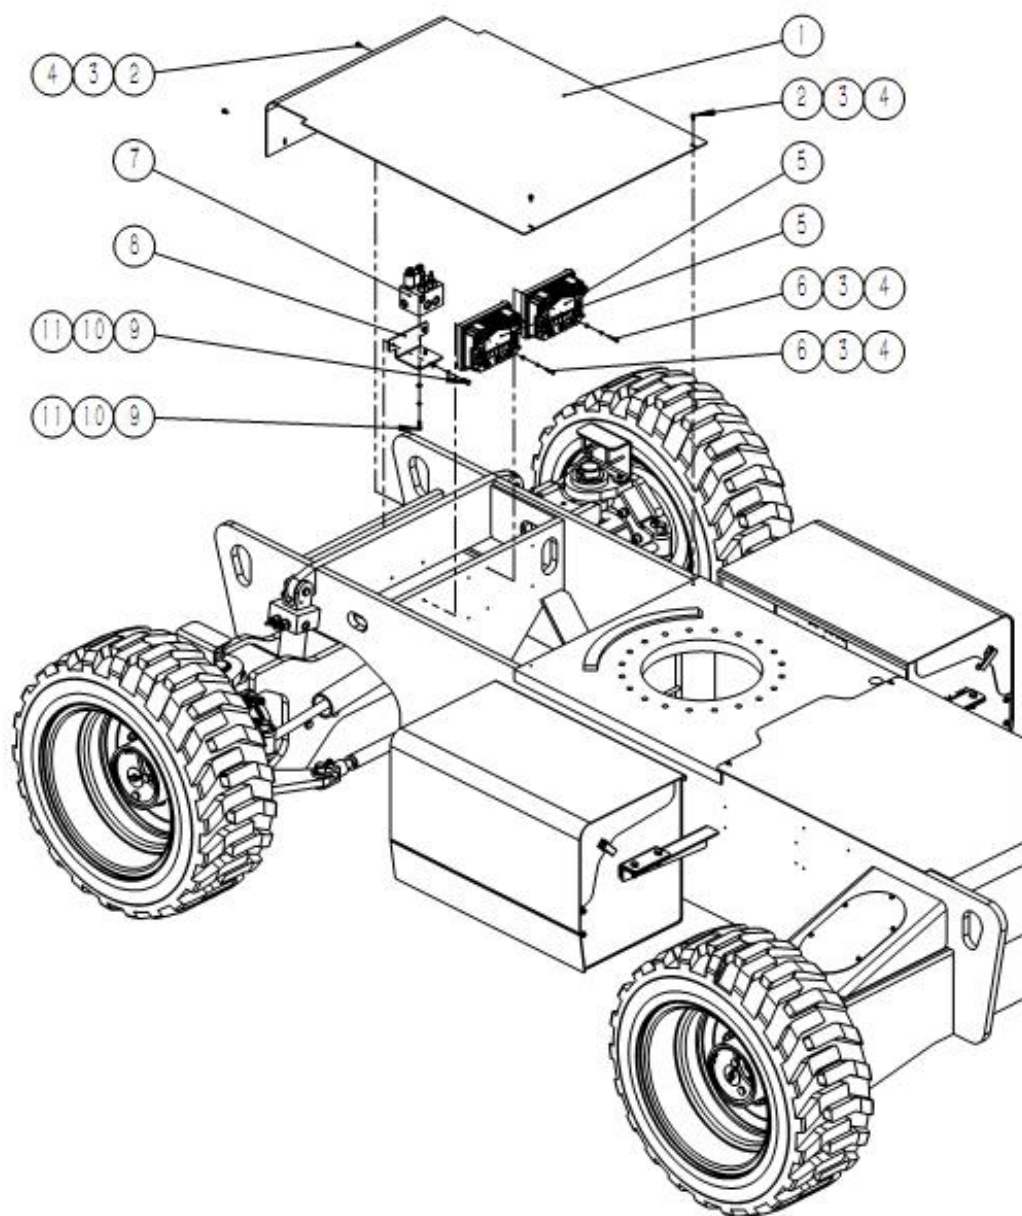


图 1-5 底盘总成（二）

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-400002-00 0	前罩板	1		224000040120
2	GB5789-86	螺栓 M6×12	4	8.8	300010080014
3	GB93-87	垫圈 6	12		300030010014
4	GB97.1-85	垫圈 6	12		300030040013
5	GTHZ210C-750200-G0 0	驱动器	2		227500020005
6	GB70-85	螺钉 M6×30	8	8.8	224100000046
7	HZ210AI-640500-G01	浮动开关阀	1		226400030005
	HZ210AI-640500-G02	浮动开关阀	1	2022.10.18	
8	GTHZ210C-400020-00 0	阀体安装板	1		224000040137
9	GB5783-86	螺栓 M8×20	2	8.8	300040020098
10	GB93-87	垫圈 8	2		300030010015
11	GB97.1-85	垫圈 8	2		300030040014

第二章 转台

图 2-1 车身转动架与底盘总成装配

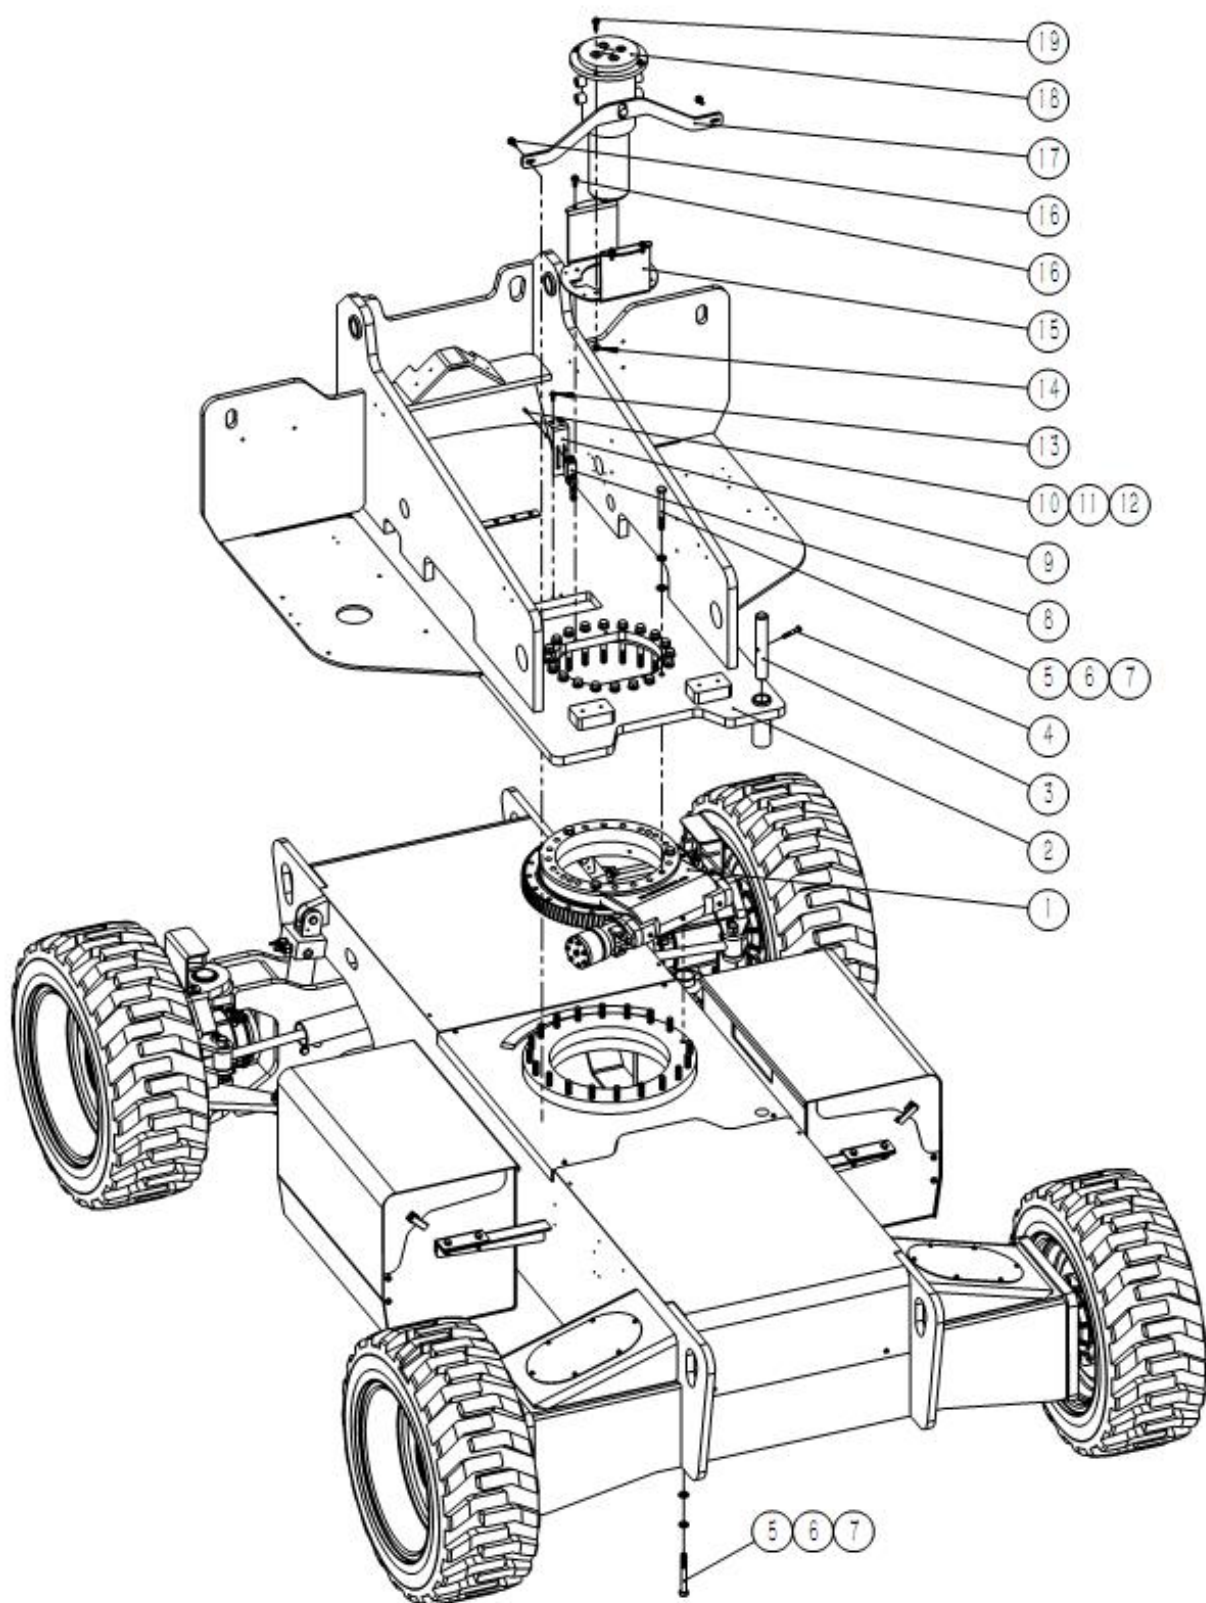


图 2-1 车身转动架与底盘总成装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-400100-G00	蜗轮蜗杆减速器	1		221300010004
2	GTHZ210C-440000-000	车身转动架	1		224400000009
3	GTHZ210C-400009-000	转向定位销	1		224000050015
4	GB5782-86	螺栓 M10×60	1		300010030016
5	GB5782-86	螺栓 M16×130	40	10.9	300010030065
6	GB93-87	垫圈 16	40		300030010004
7	GB97.1-85	垫圈 16	40		300030040005
8	GTWZ110-750400-G00	限位开关	1		227200050006
9	GTHZ210C-400006-000	开关支架	1		224400040012
10	GB70-85	螺钉 M5×20	4		300040020087
11	GB93-87	垫圈 5	4		300030010013
12	GB97.1-85	垫圈 5	4		300030040012
13	GB5789-86	螺栓 M8×20	4		300010080025
14	GB6183-86	螺母 M10	4		300020490003
15	GTHZ210C-400004-000	中心回转体支架	1		224000040121
16	GB5789-86	螺栓 M10×25	6		300010080001
17	GTHZ210C-400014-000	限位板	1		224000030062
18	GTHZ210C-400900-G00	中心回转体	1		224000000093
19	GB5789-86	螺栓 M10×40	4		300010080010

图 2-2 配重块与车身转动架装配

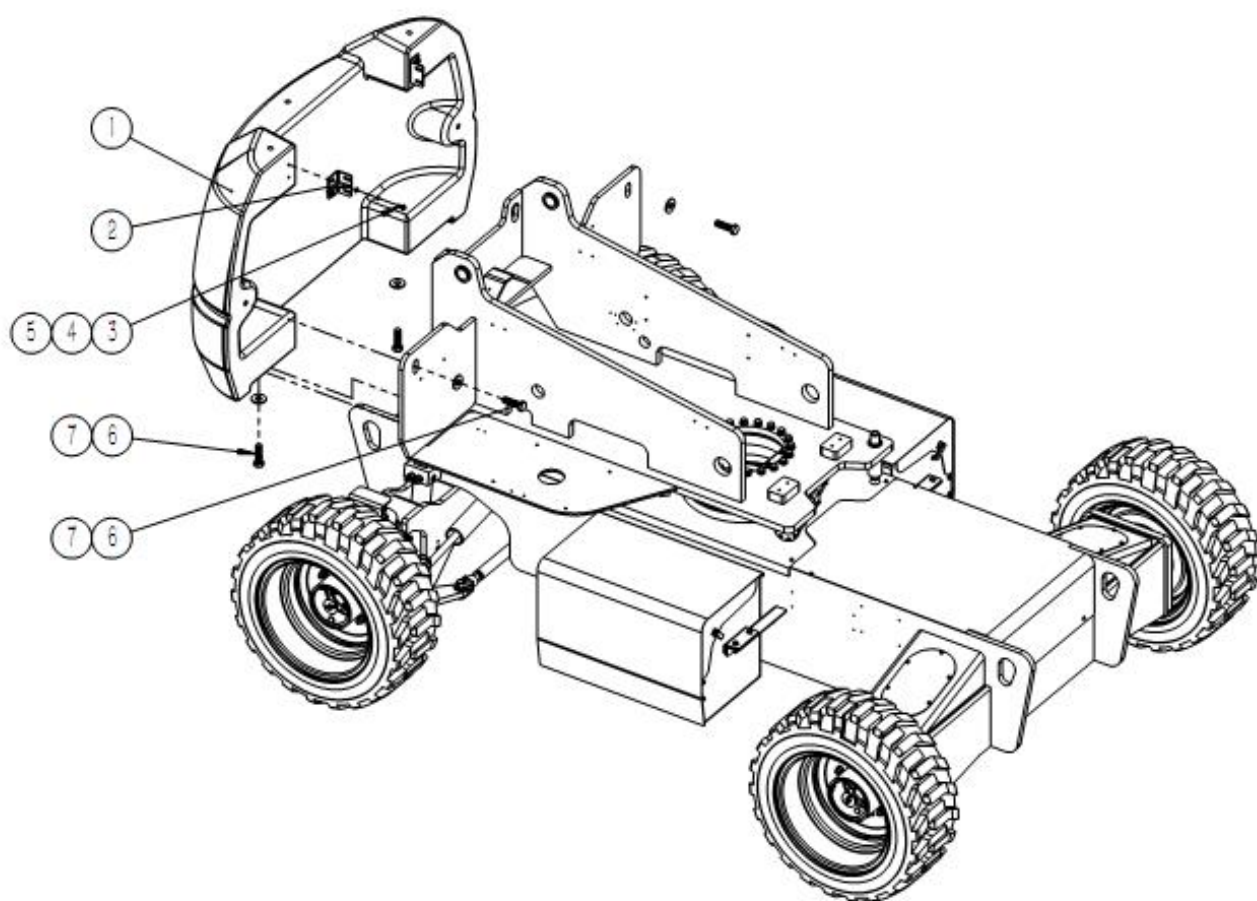


图 2-2 配重块与车身转动架装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-010000-000	配重块	1		220100010007
2	GTHZ210C-401400-000	支架 A	2		224000000159
3	GB5783-86	螺栓 M10×25	4	8.8	300010040009
4	GB93-87	垫圈 10	4		300030010001
5	GB97.1-85	垫圈 10	4		300030040002
6	GB5783-86	螺栓 M24×80	4	8.8	300010040247
7	GTHZ120-200600-000	特制垫圈	4		222100050003

图 2-3 转台总成

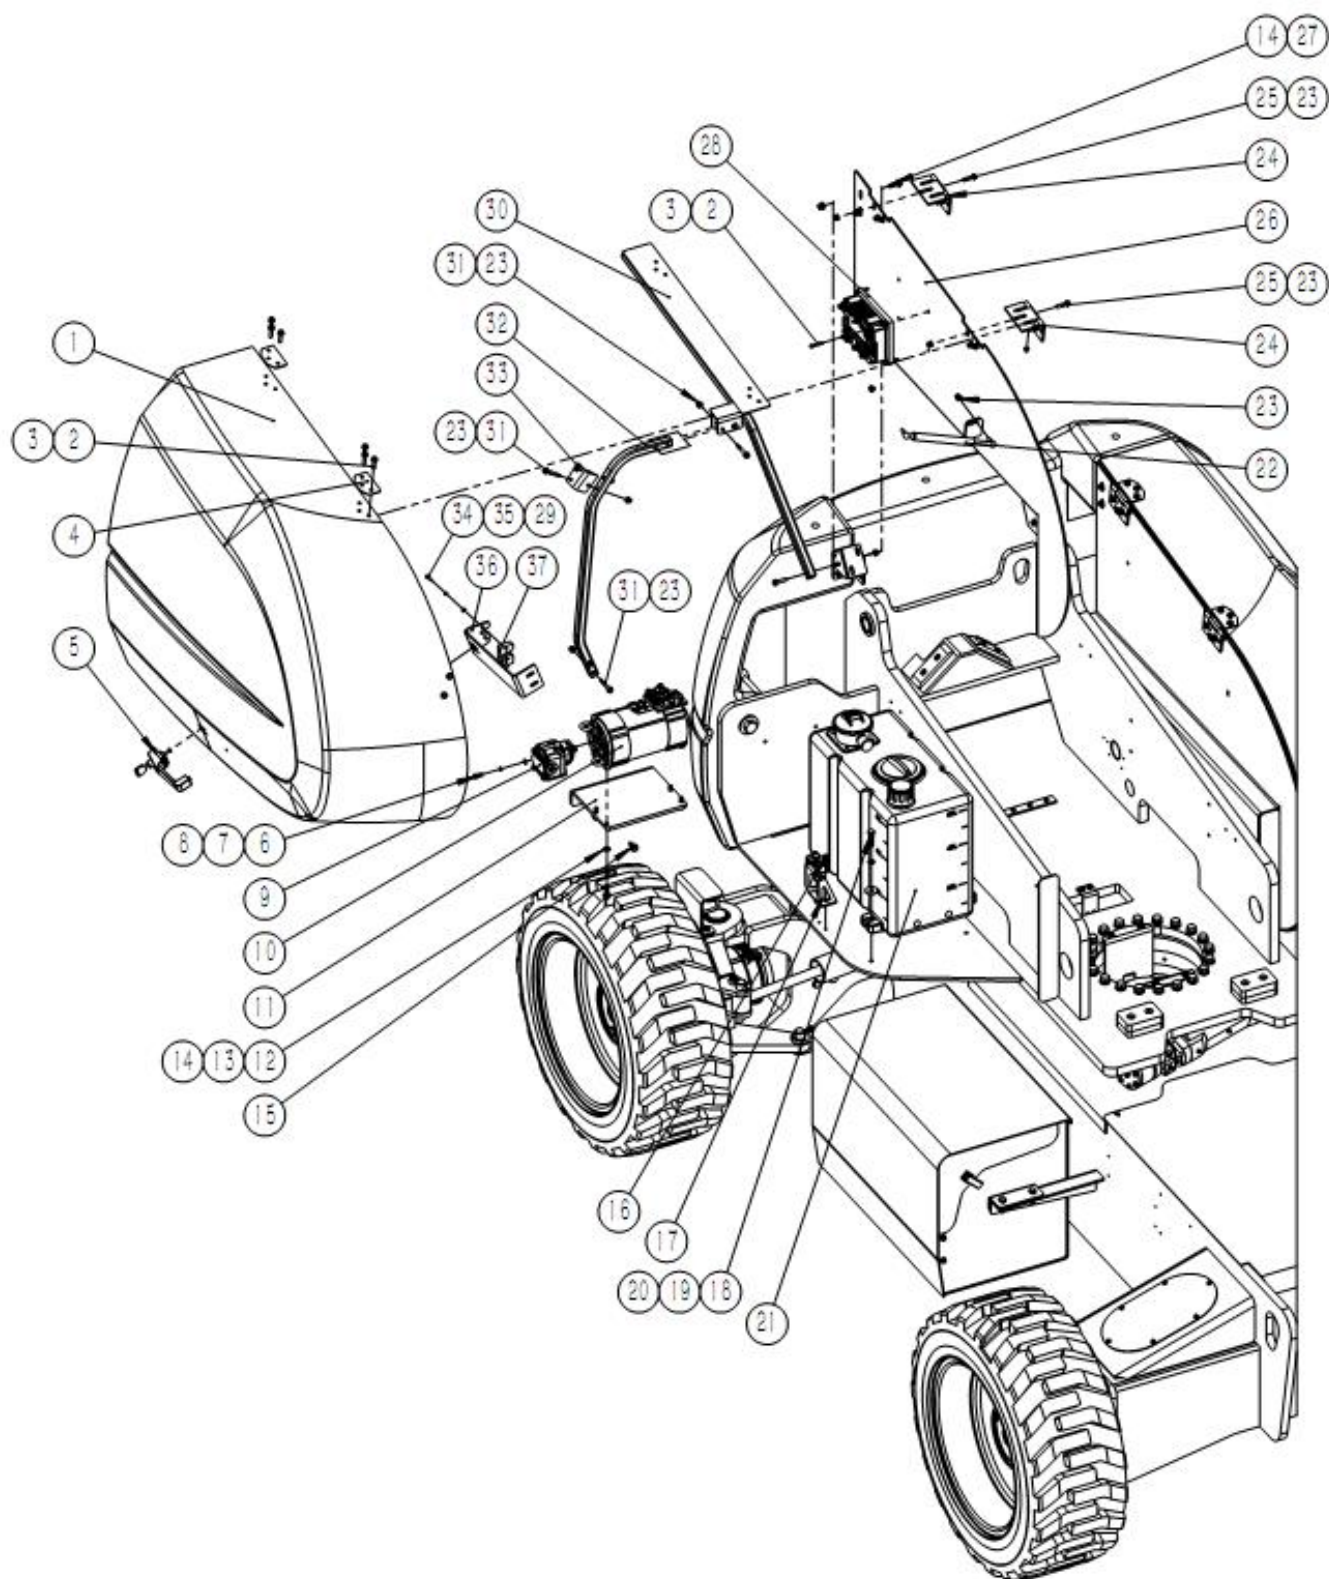


图 2-3 转台总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-400300-G00	左机罩	1		224000000099
2	GB5789-86	螺栓 M8×35	6		300010080016
3	GB6183-86	螺母 M8	14		300020490004
4	GTHZ210C-400027-000	压板	2		224000030124
5	140XEN-401400-G00	手柄	1		224000100006
6	GB5783-86	螺栓 M8×20	2	8.8	300010040173
7	GB93-87	垫圈 8	2		300030010015
8	GB97.1-85	垫圈 8	2		300030040014
9	XSD090-622000-000	齿轮泵	1		206100070323
10	XPD090-621000-000	油泵电机	1		209100020186
11	GTHZ210C-400008-000	油泵电机支架	1		224000040125
12	GB97.1-85	垫圈 10	4		300030040002
13	GB93-87	垫圈 10	4		300030010001
14	GB5789-86	螺栓 M10×30	6	8.8	300010080024
15	GB5789-86	螺栓 M10×25	2	8.8	300010080001
16	GB5789-86	螺栓 M8×20	2	8.8	300010080025
17	GTHZ210C-401200-000	锁钩	1		224000000097
18	GB5783-86	螺栓 M12×45	4	8.8	300010040040
19	GB93-87	垫圈 12	4		300030010002
20	GB/T 96.1-2002	大垫圈 12	4		300030240005
21	GTHZ210C-610000-G00	液压油箱总成	1		226100000015
22	GTHZ210C-400026-G01	气弹簧	1		224000000222
23	GB6183-86	螺母 M8		同 3	300020490004
24	GTHZ210C-400700-001	铰链	2		
25	GB5789-86	螺栓 M8×30	6		300010080005

图 2-3 转台总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
26	GTHZ210C-420000-001	左支架	1		224000000178
27	GB6183-86	螺母 M10	2		300020490003
28	GTHZ210C-751100-000	油泵驱动器总成	1		227500020006
29	GB97.1-85	垫圈 6	2		300030040013
30	GTHZ210C-401500-000	左托架	1		224000000160
31	GB5789-86	螺栓 M8×55		8.8	300010080046
32	HZ210AI-401900-000	左弯管支架	1		224000000215
34	GB70-85	螺钉 M6×20	2	8.8	300040020158
35	GB93-87	垫圈 6	2		300030010014
36	GTHZ210C-400017-001	门锁安装板	1		224000040222
37	140XEN-401200-G00	右锁体	1		224000100004

图 2-4 转台总成 (二)

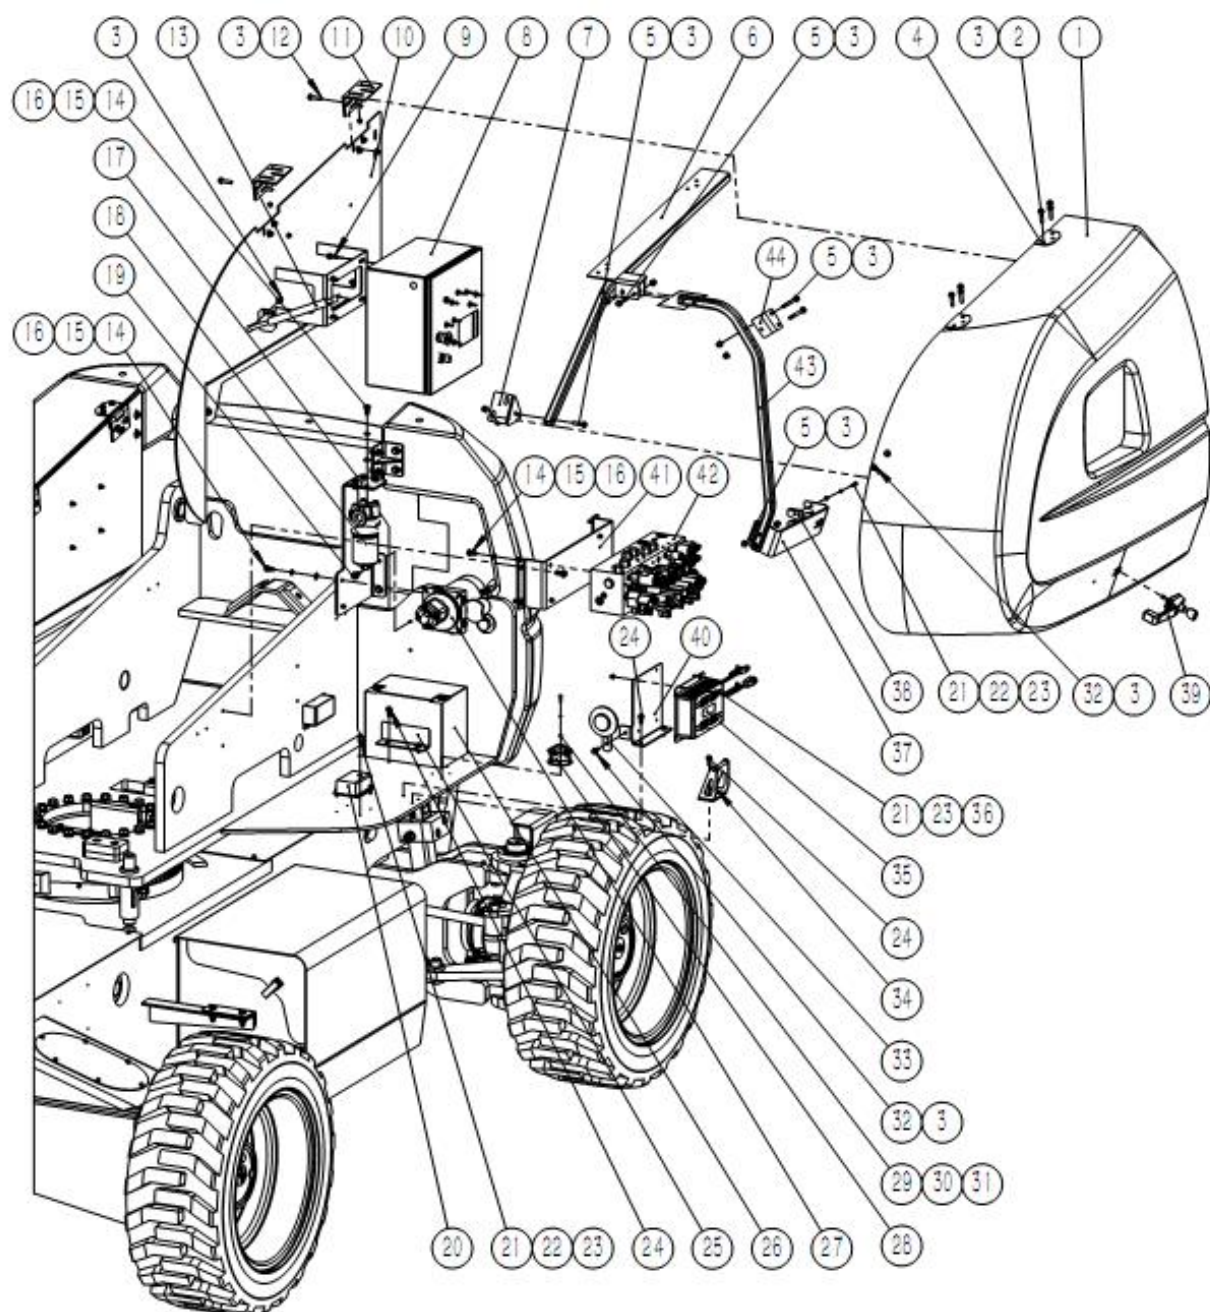


图 2-4 转台总成（二）

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-400400-G00	右机罩	1		224000000098
2	GB5789-86	螺栓 M8×35	6	8.8	300010080016
3	GB6183-86	螺母 M8	14		300020490004
4	GTHZ210C-400027-000	压板	2		224000030124
5	GB5789-86	螺栓 M8×55		8.8	300010080046
6	GTHZ210C-401600-000	右托架	1		224000000161
7	GTHZ210C-400024-000	机盖支承板 A	1		224000040217
8	GTHZ210C-710000-001	下控总成	1		227500040023
9	GB5789-86	螺栓 M8×25	4	8.8	300010080026
10	GTHZ210C-430000-001	右支架	1		224000000179
11	GTHZ210C-400700-001	铰链	2		224000000188
12	GB5789-86	螺栓 M8×30	6		300010080005
13	GTHZ210C-400026-G01	气弹簧	1		224000000222
14	GB5783-86	螺栓 M10×20	10	8.8	300010040005
15	GB93-87	垫圈 10	10		300030010001
16	GB97.1-85	垫圈 10	10		300030040002
17	GTHZ210C-400007-000	应急泵支架	1	配 GTHZ210C-600501-G00	224000040124
	HZ210AI-400007-001	应急泵支架	1	配 HZ210AI-600501-G01	224000040229
18	GTHZ210C-600501-G00	过滤器	1	贺德克	226000050027
	HZ210AI-600501-G01	过滤器	1	黎明	226000050040
19	GB5789-86	螺栓 M10×25	2	8.8	300010080001
20	GTHZ210C-751300-000	DCDC	1		227000070035
21	GB70-85	螺钉 M6×20	10	8.8	300040020158
22	GB93-87	垫圈 6	6		300030010014
23	GB97.1-85	垫圈 6	10		300030040013
24	GB5789-86	螺栓 M8×20	2	8.8	300010080025
25	GTHZ210C-400011-000	电池挡板	2		224100020142

图 2-4 转台总成（二）

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
26	60XEND-760100-G00	免维护电池	1		227600020003
27	GTHZ210C-650100-G00	应急泵	1		226500010005
28	GTHZ210C-750600-G00	倾角开关	1		227200080005
29	GB70-85	螺钉 M5×16	3	8.8	300040020149
30	GB93-87	垫圈 5	3		300030010013
31	GB97.1-85	垫圈 5	3		300030040012
32	GB5789-86	螺栓 M8×25	4	8.8	300010080026
33	N163-700009-000	喇叭	1		207900130006
34	GTHZ210C-401200-000	锁钩	1		224000000097
35	GTHZ210C-750800-G00	充电器（小）	1		227800010009
36	GB6183-86	螺母 M6	4		300020490002
37	GTHZ210C-400016-001	右门锁安装板	1		224000040221
38	140XEN-401100-G00	左锁体	1		224000100003
39	140XEN-401400-G00	手柄	1		224000100006
40	GTHZ210C-400013-000	小充电器支架	1		224000040127
41	HZ210AI-400005-001	主阀安装板	1		224000040230
42	HZ210AI-640100-G01	动臂功能阀	1		226400010011
43	HZ210AI-401800-000	右弯管支架	1		224000000214

第三章 臂架

图 3-1 臂架与车身转动架装配

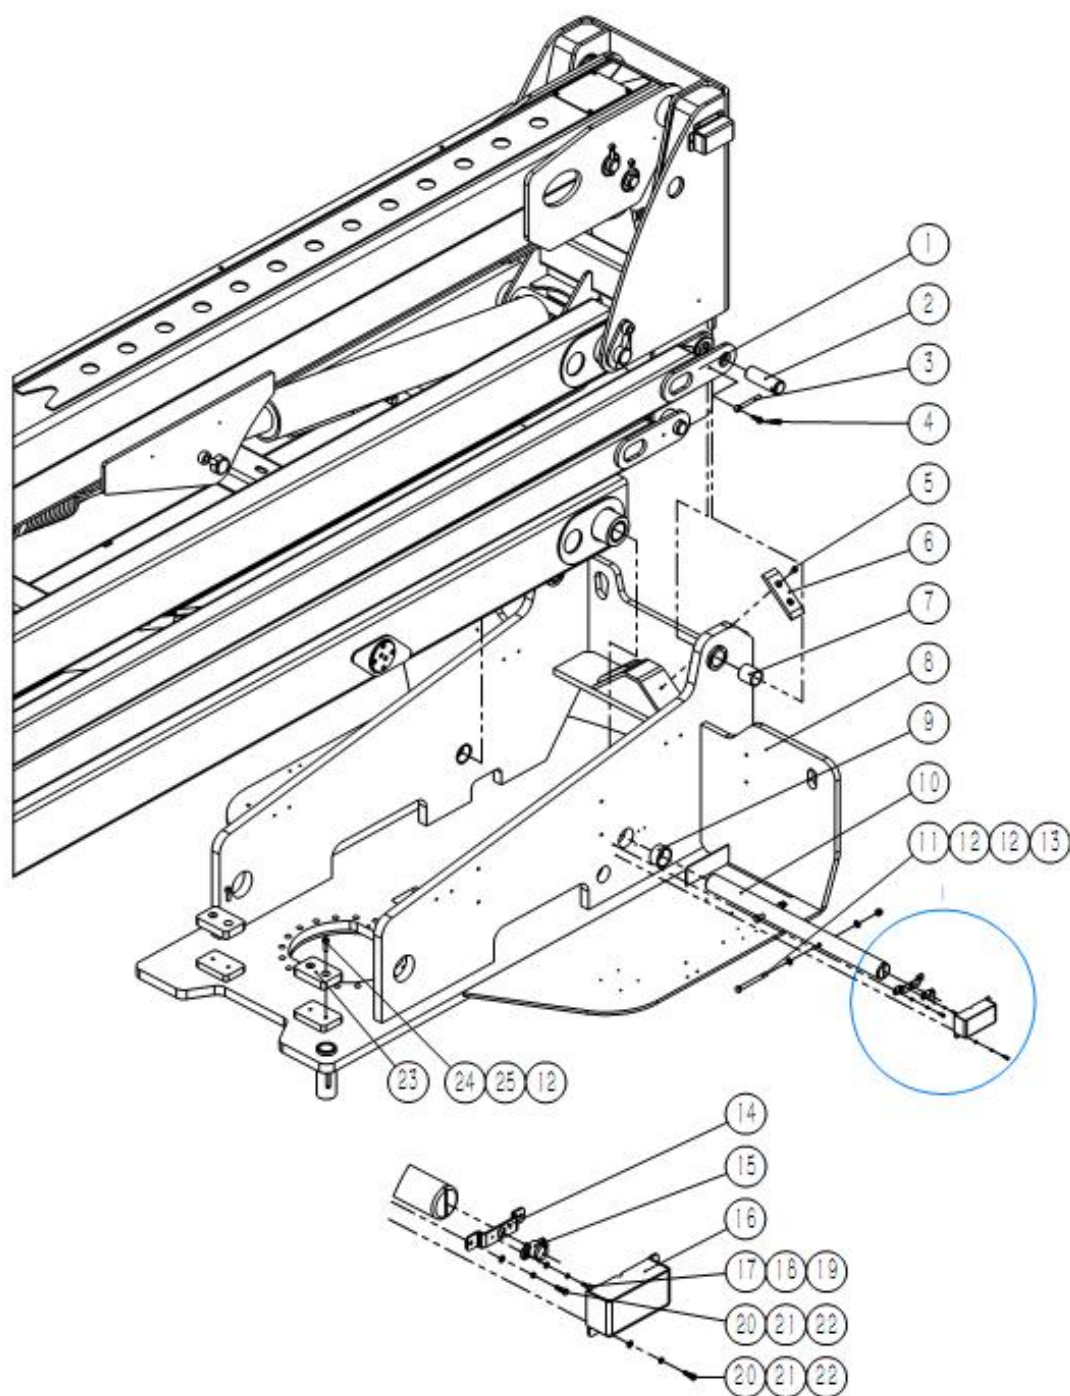


图 3-1 臂架与车身转动架装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1		曲臂总成	1	详见图 3-2	
2	GTHZ210C-900104-000	销轴	2		229000050129
3	78XEN-020002-000	鱼眼销	2		229000110001
4	GB5789-86	螺栓 M8×25	2		300010080026
5	GB/T70.3-2000	螺钉 M8×20	4	8.8	300040040002
6	GTHZ210C-400015-000	上关节垫块	2		224000110005
7	CT-514050-G00	纤维衬套	2		229000070026
8	GTHZ210C-440000-000	车身转动架	1		224400000009
9	CT-515030-G00	纤维衬套	2		224000080011
10	HZ210AI-900301-000	开槽销轴	1		229000050191
11	GB5782-86	螺栓 M10×110	2	8.8	300010030003
12	GB97.1-85	垫圈 10	8		300030040002
13	GB889-86	螺母 M10	2	8	300020150003
14	GTHZ210C-400010-000	电位器支架	1		224000040126
15	60XEND-741200-G01	电位器	1		227400010013
16	GTHZ210C-400800-000	电位器护罩	1		224000000092
17	GB5783-86	螺栓 M4×12	2	8.8	300010040128
18	GB93-87	垫圈 4	2		300030010012
19	GB97.1-85	垫圈 4	2		300030040011
20	GB5783-86	螺栓 M5×16	5		300010040138
21	GB93-87	垫圈 5	5		300030010013
22	GB97.1-85	垫圈 5	5		300030040012
23	GTHZ210C-400012-000	垫块	2		224000110004
24	GB70-85	螺钉 M10×30	4		300040020075
25	GB93-87	垫圈 10	4		300030010001

图 3-2 曲臂总成

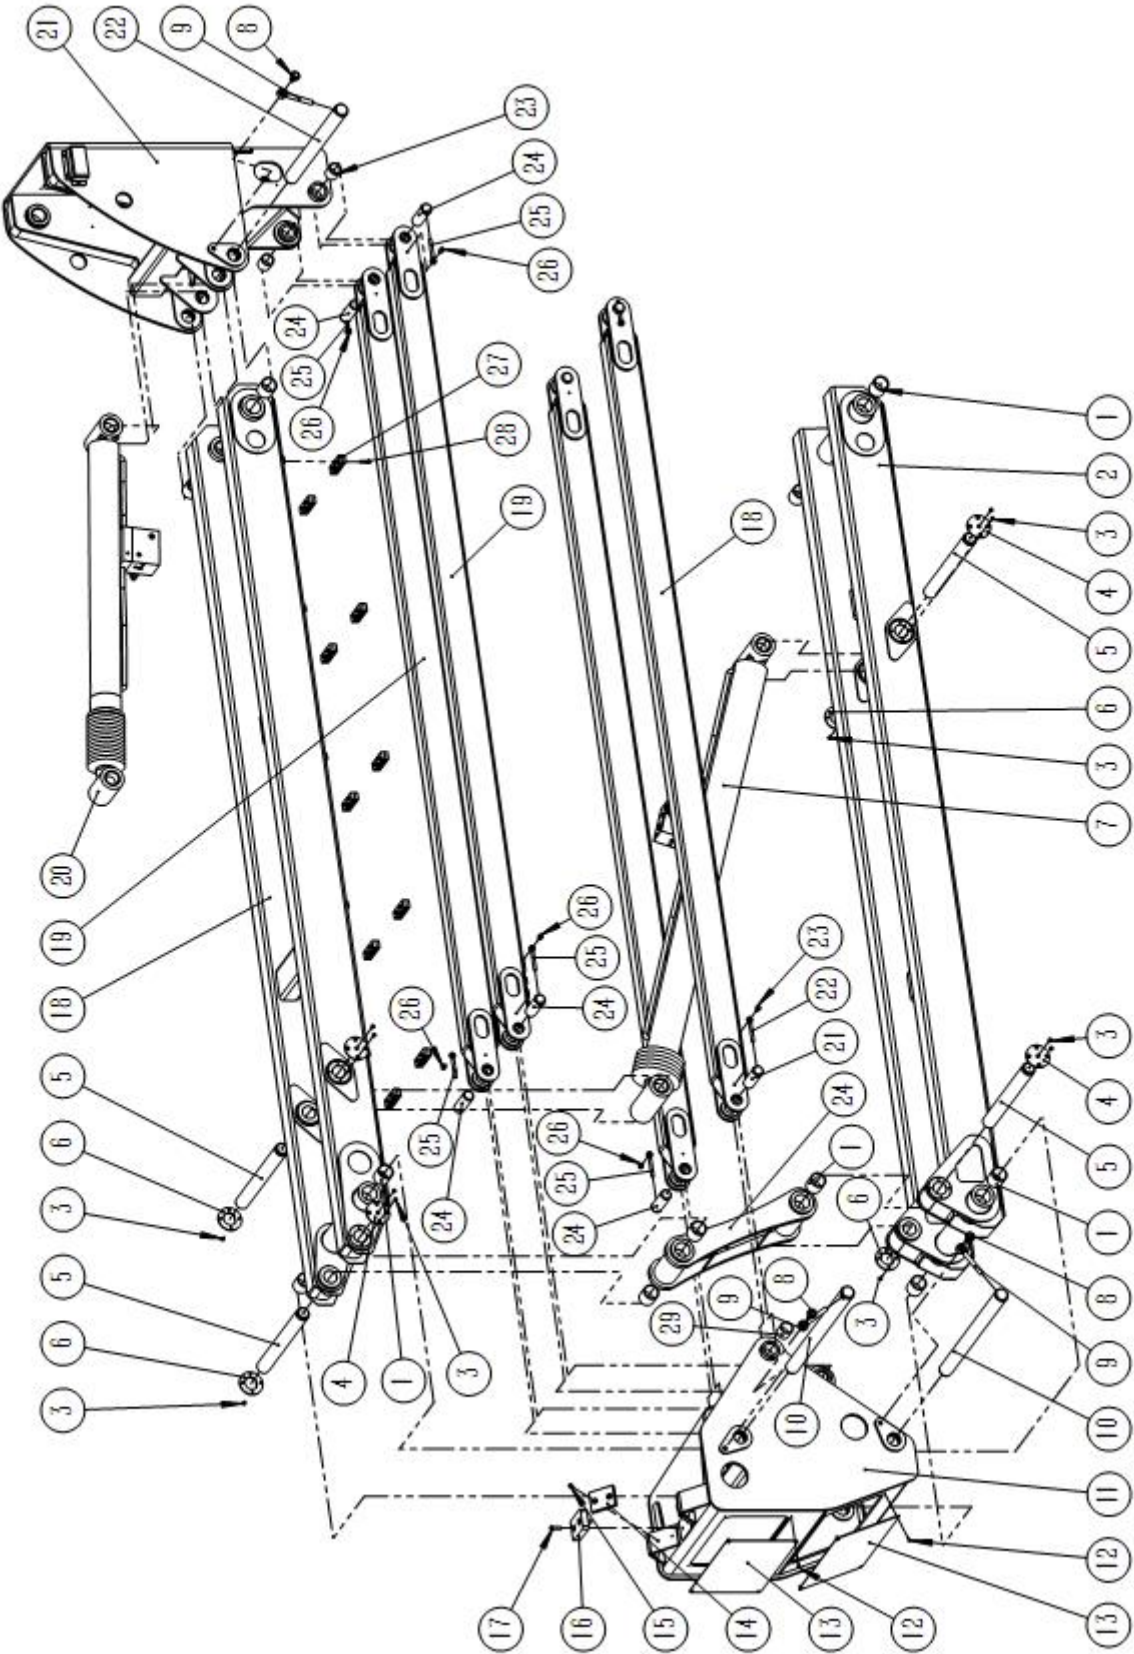


图 3-2 曲臂总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	CT-515060-G00	纤维衬套	12		229000070025
2	HZ210AI-911100-000	下臂焊件	1		229100000237
3	GB/T70. 3-2008	螺钉 M6×16	36	8. 8	300040040026
4	GTHZ210C-900001-000	端盖	4		229000030095
5	GTHZ210C-900202-000	销轴	4		229000050130
6	GTHZ210C-900011-000	开孔端盖	4		229000030138
7		下臂油缸组件	1	详见图 5-4	
8	GB5789-86	螺栓 M16×35	2	8. 8	300010080013
9	GTHZ210C-200007-000	销轴 16120	2		222100030027
10	GTHZ210C-900101-000	销轴	2		229000050131
11	GTHZ210C-915100-000	居中关节焊件	1		229100000191
12	GB/T70. 2-2000	螺钉 M6×12	8		300040030021
13	GTHZ210C-915001-000	居中关节盖板	2		229100030183
14	GTHZ210C-915002-000	导向滑块	2		229000090031
15	GB/T70. 3-2000	螺钉 M8×20	4	8. 8	300040040002
16	GTHZ210C-400012-000	垫块	1		224000110004
17	GB5789-86	螺栓 M8×35	2	8. 8	300010080016
18	HZ210AI-912100-000	中臂焊件	1		229100000236
19	GTHZ210C-920100-000	拉杆	2		229100000200
20		上臂油缸组件	1	详见图 5-5	
21	GTHZ210C-916100-000	上关节焊件	1		229000000075
22	GTHZ210C-900102-000	销轴	1		229000050136
23	CT-514050-G00	纤维衬套	4		229000070026
24	GTHZ210C-900104-000	销轴	4		229000050129
25	TZ010-110090-000	锁销	4		229000110011

图 3-2 曲臂总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
26	GB5789-86	螺栓 M8×20	4	8.8	300010080025
27	GTHZ210C-600201-G00	16 双联管夹	20		226000020005
28	GB70-85	螺钉 M8×30	20		300040020100
29	CT-514050-G00	纤维衬套	2		229000070026

图 3-3 上关节与上臂装配

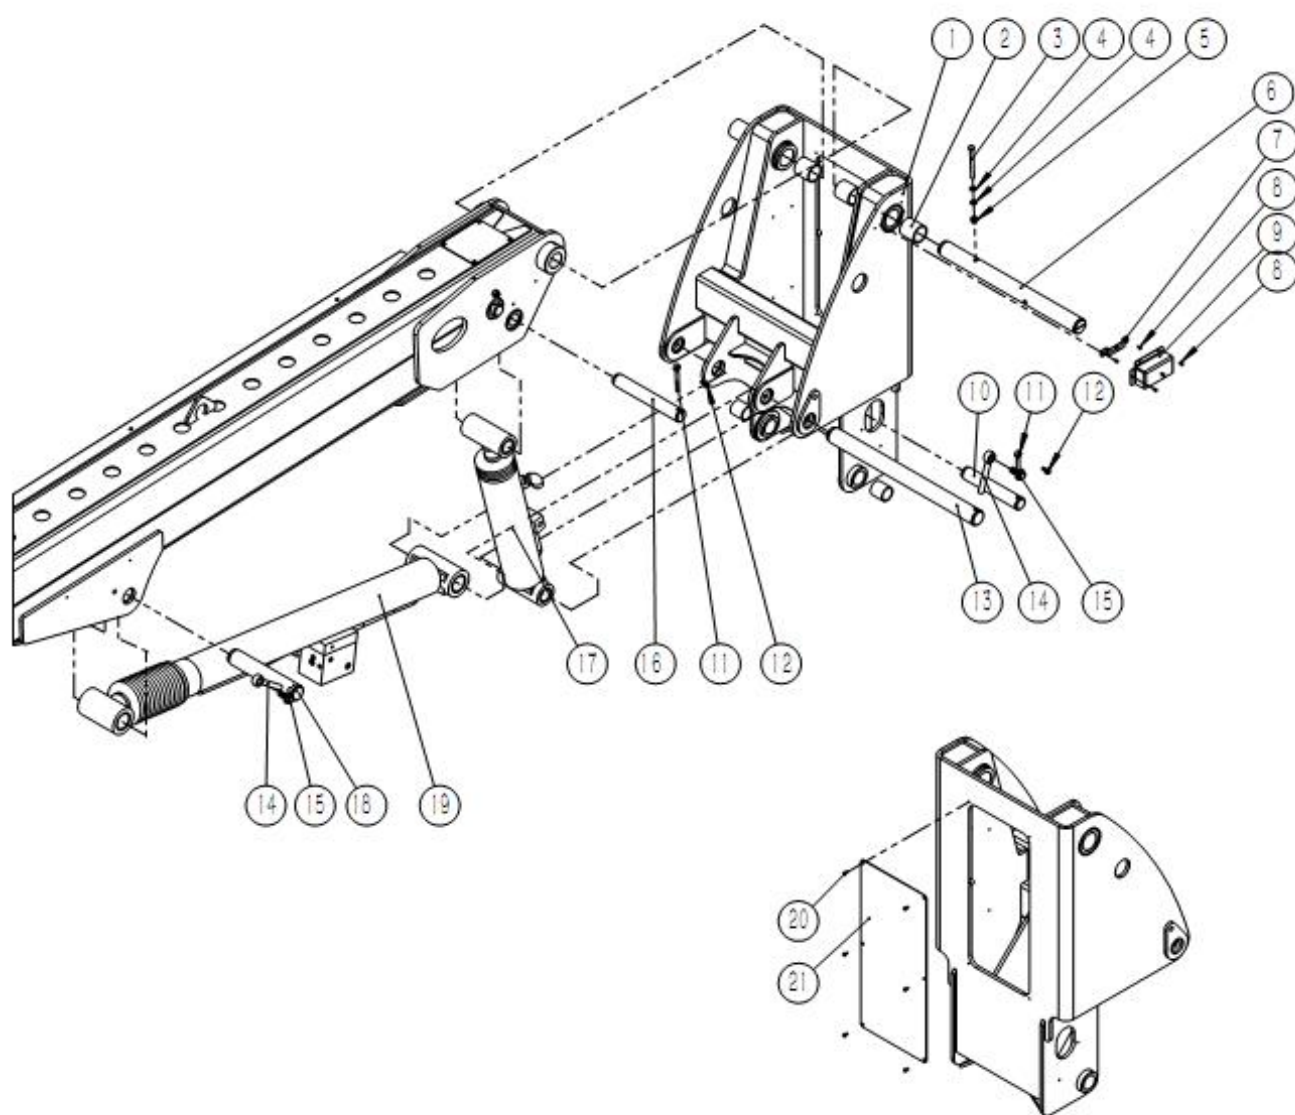


图 3-3 上关节与上臂装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-916100-000	上关节焊件	1		2290000000075
2	CT-515060-G00	纤维衬套	4		229000070025
3	GB5782-86	螺栓 M10×110	1	8.8	300010030003
4	GB97.1-85	垫圈 10	2		300030040002
5	GB6183-86	螺母 M10	1	8	300020490003
6	HZ210AI-900302-000	开槽销轴	1		229000050192
7	GTHZ210C-400010-000	电位器支架	1		224000040126
8	GB/T70.2-2000	螺钉 M5×10	5	8.8	300040030022
9	GTHZ210C-400800-000	电位器护罩	1		2240000000092
10	GTHZ210C-900109-000	销轴	1		229000050144
11	TZ010-110090-000	锁销	2		229000110011
12	GB/T5789-1986	螺栓 M8×20	2	8.8	300010080025
13	GTHZ210C-900102-000	销轴	1		229000050136
14	GTHZ210C-200007-000	销轴 16120	2		222100030027
15	GGB/T5789-1986	螺栓 M16×35	2	8.8	300010080013
16	GTHZ210C-900103-000	销轴	1		229000050134
17	GTHZ210C-620600-000	下调平油缸	1		226200050003
18	GTHZ210C-900106-000	销轴	1		229000050132
19		上臂油缸组件	1	详见图 5-5	
20	GTHZ210C-916001-000	上关节盖板	1		229100030191
21	GB/T70.2-2000	螺钉 M6×12	6	8.8	300040030021

图 3-4 上臂与伸缩臂装配

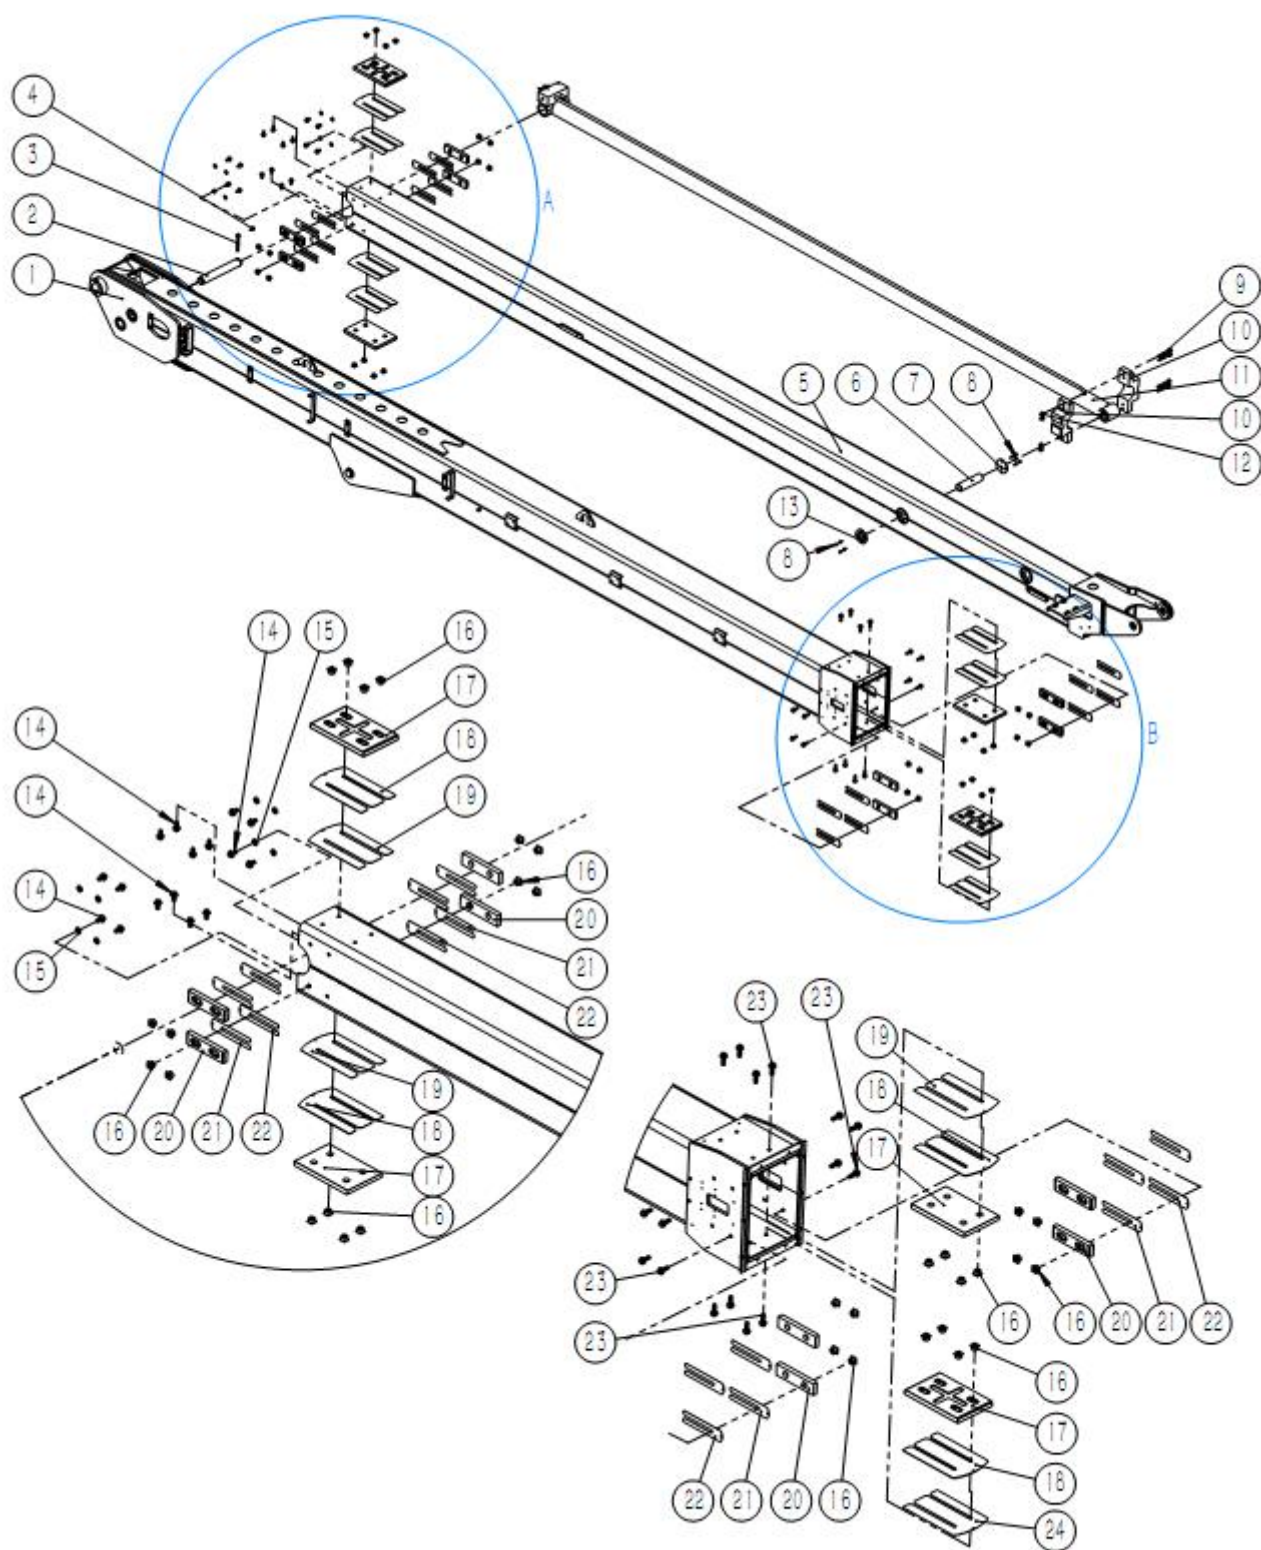


图 3-4 上臂与伸缩臂装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	HZ210AI-913100-000	上臂焊件	1		229100000267
2	GTHZ210C-900103-000	销轴	1		229000050134
3	TZ010-110090-000	锁销	1		229000110011
4	G005789-008020-00	螺栓 M8×20	1	8.8	300010080025
5	HZ210AI-914100-000	伸缩臂焊件	1		229100000269
6	GTHZ210C-900201-000	销轴	1		229000050135
7	GTHZ210C-900002-000	小端盖	1		229000030096
8	GT070P3-006016-02	螺钉 M6×16	9	8.8	300040040026
9	G005789-010080-01	螺栓 M10×80	4		300010080029
10	GTHZ210C-900003-000	油缸支撑块	2		229000090034
11		伸缩臂油缸组件	1	详见图 5-6	
12	G006183-000010-00	螺母 M10	4	8	300020490003
13	GTHZ210C-900012-000	小开孔端盖	1		229000030139
14	G005789-010020-00	螺栓 M10×20	16	8.8	300010080025
15	GB97.1-85	垫圈 10	8		300030040002
16	GTHZ210C-913302-000	方形螺母	32		229000110008
17	GTHZ210C-913401-000	上下滑块	4		229000090033
18	GTHZ210C-900009-000	大垫片	4		229000030092
19	GTHZ210C-900008-000	大薄垫片	4	数量按实际需要	229000030089
20	GTHZ210C-913301-000	侧边滑块	8		229000090032
21	GTHZ210C-900006-000	小垫片	8		229000030088
22	GTHZ210C-900007-000	小薄垫片	8	数量按实际需要	229000030093
23	G005789-010030-00	螺栓 M10×30	16	8.8	300010080024
24	GTHZ210C-900010-000	薄垫片	2	数量按实际需要	229000030133

图 3-5 上臂与伸缩臂装配（二）

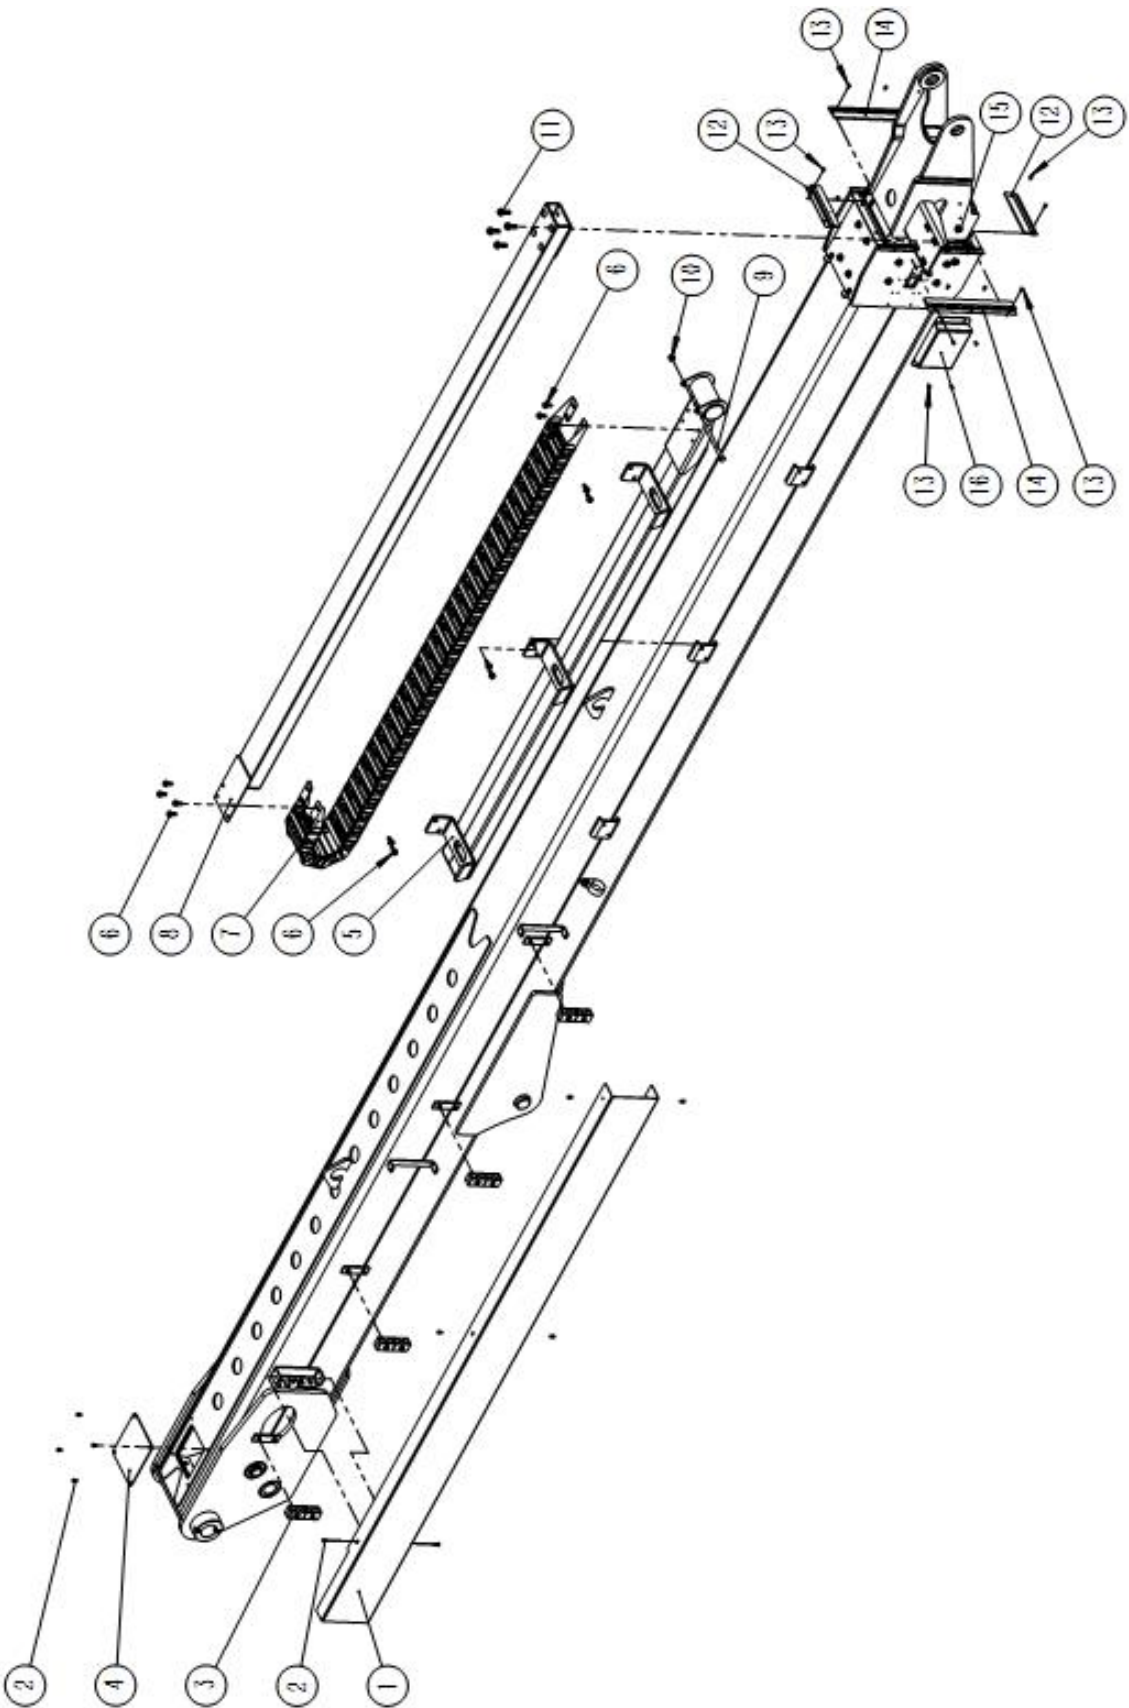


图 3-5 上臂与伸缩臂装配（二）

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-913002-000	上臂侧罩板	1		229100040167
2	GB/T70. 2-2000	螺钉 M6×12	10	8. 8	300040030021
3	GTHZ210C-600208-G00	13. 5 双联管夹	8		226000020013
4	GTHZ210C-913001-000	上臂盖板	1		229100030219
5	GTHZ210C-913200-000	走线管焊件	1		2290000000082
6	GB/T5789-1986	螺栓 M8×20	14	8. 8	300010080025
7	GTHZ210C-900100-G00	拖链	1		226000050029
8	GTHZ210C-900500-000	上走线管	1		2290000000079
9	GB5782-86	螺栓 M10×140	1	8. 8	300010030006
10	GB889-86	螺母 M10	1	8	300020150003
11	GB/T5789-1986	螺栓 M10×30	4	8. 8	300010080024
12	GTHZ210C-913005-000	短毛刷	2		2290000000081
13	GB/T70. 2-2000	螺钉 M5×10	14	8. 8	300040030022
14	GTHZ210C-913004-000	长毛刷	2		2290000000080
15	GB6183-86	螺母 M10	4	8	300020490003

图 3-6 小臂与起升臂总成装配

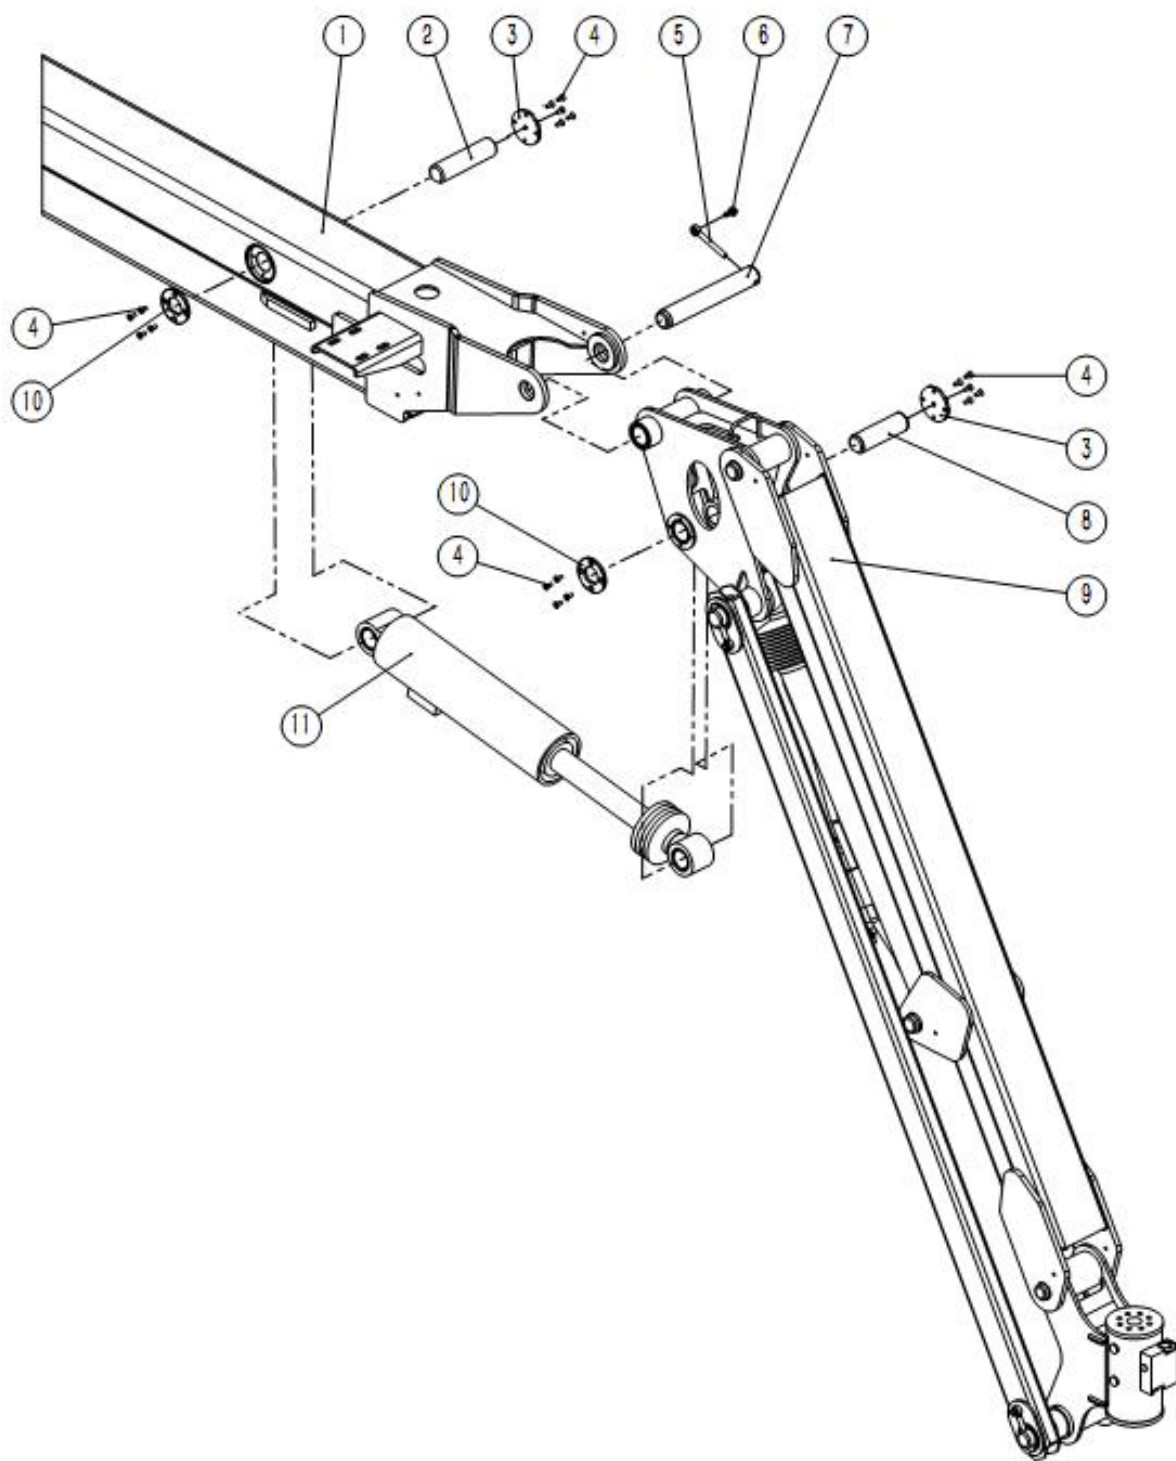


图 3-6 小臂与起升臂总成装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1		起升臂总成	1	详见图 3-4、3-5	
2	GTHZ210C-900201-000	销轴	1		229000050135
3	GTHZ210C-900002-000	小端盖	2		229000030096
4	GT070P3-006016-02	螺钉 M6×16	18	8.8	300040040026
5	TZ010-110090-000	锁销	1		229000110011
6	G005789-008020-00	螺栓 M8×20	1	8.8	300010080025
7	GTHZ210C-900105-000	销轴	1		229000050138
8	GTHZ210C-900203-000	销轴	2		229000050137
9		小臂总成	1	详见图 3-7	
10	GTHZ210C-900012-000	小开孔端盖	2		229000030139
11		上调平油缸组件	1	详见图 5-7	

图 3-7 小臂总成

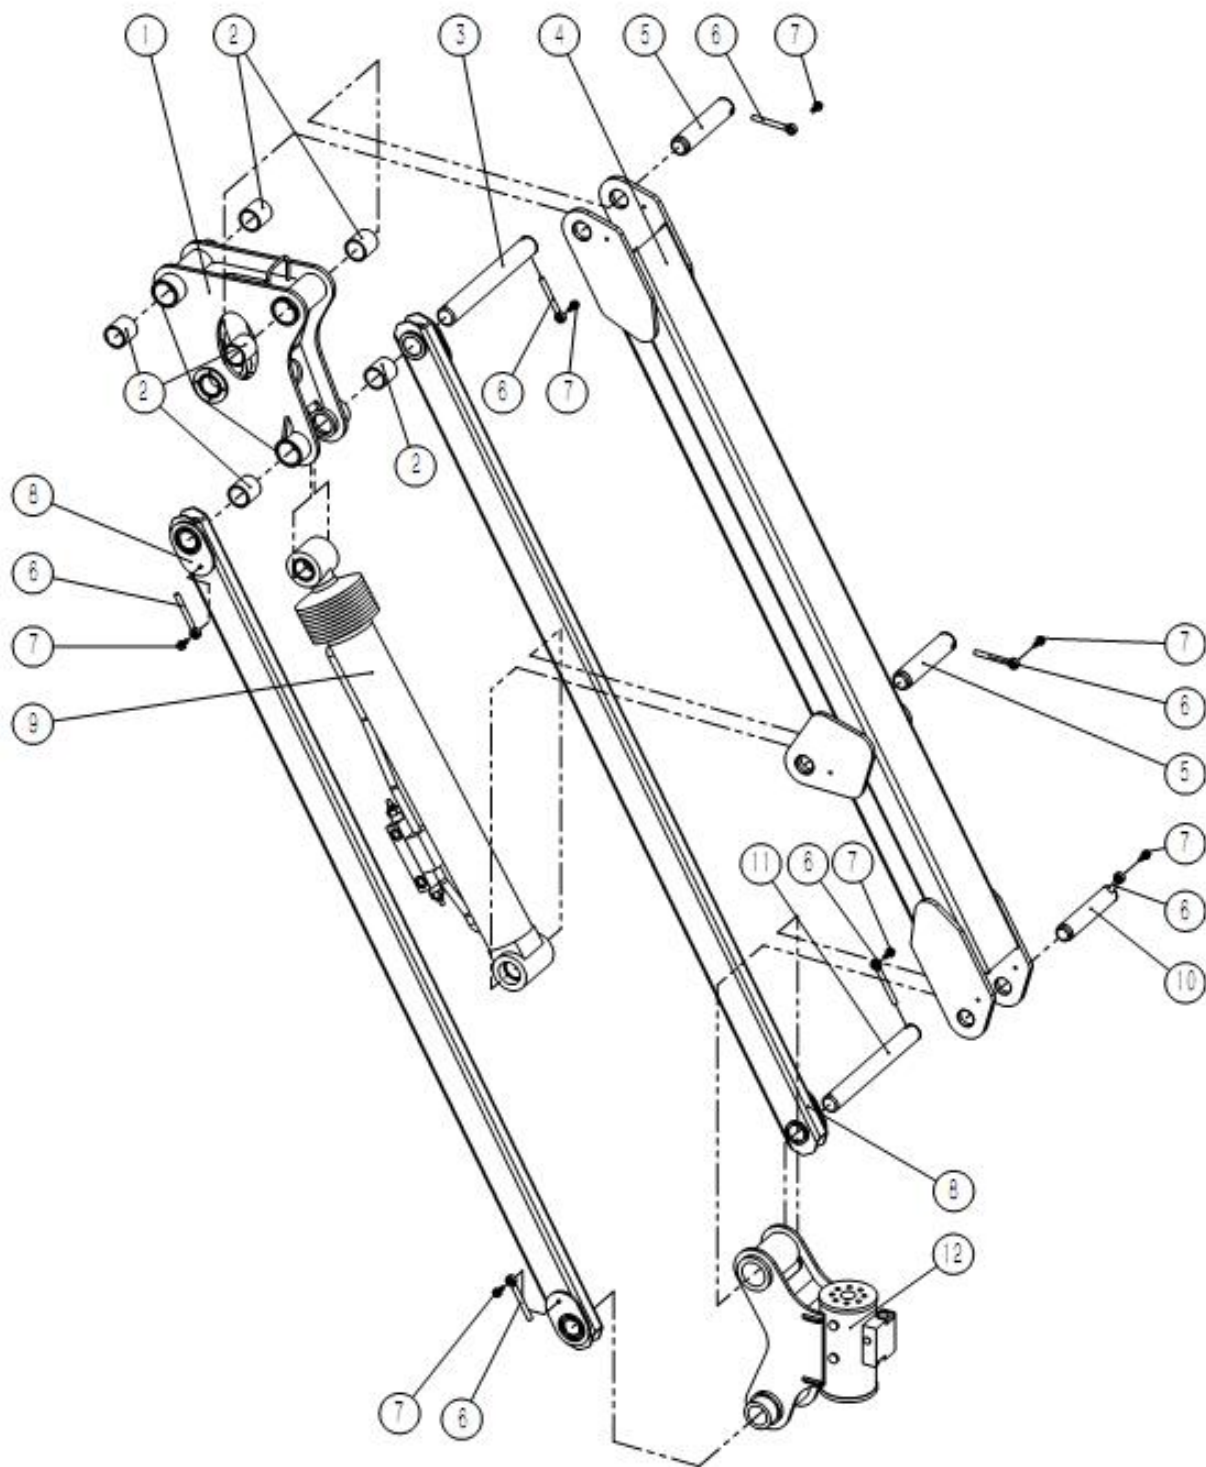


图 3-7 小臂总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	HZ210AI-917100-000	摆动关节焊件	1		229100000265
2	CT-514050-G00	纤维衬套	6		229000070026
3	GTHZ210C-900401-000	销轴	1		229000050139
4	HZ210AI-918100-000	摆臂焊件	1		229100000262
5	GTHZ210C-900107-000	销轴	2		229000050142
6	TZ010-110090-000	锁销	7		229000110011
7	G005789-008020-00	螺栓 M8×20	7	8.8	300010080025
8	GTHZ210C-920200-000	连杆	2		229100000194
9		摆臂油缸组件	1	详见图 5-8	
10	GTHZ210C-900108-000	销轴	1		229000050140
11	GTHZ210C-900402-000	销轴	1		229000050141
12	GTHZ210C-621000-000	摆动油缸	1		226200070011

第四章 工作平台

图 4-1 工作平台与小臂总成装配

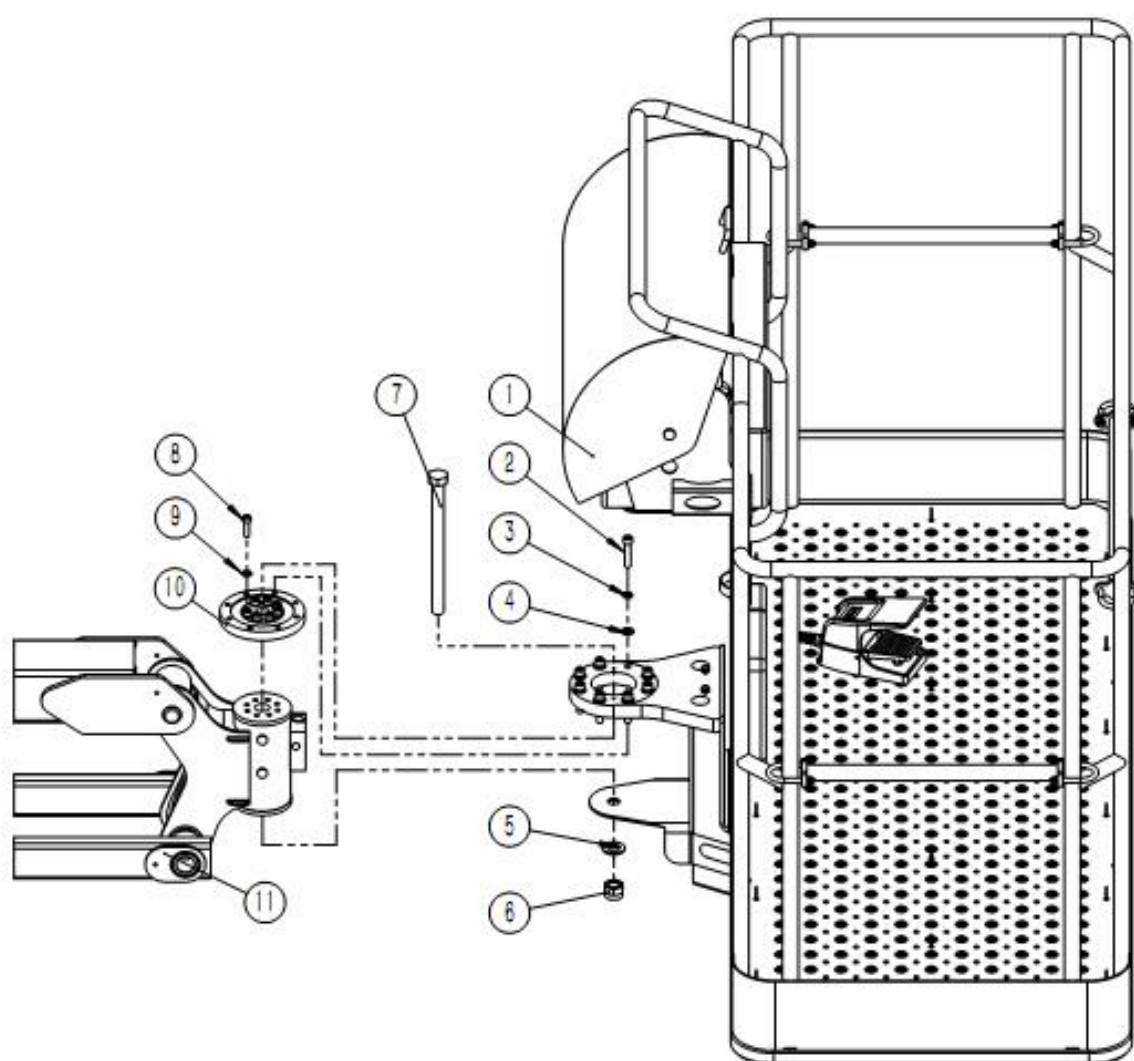


图 4-1 工作平台与小臂总成装配

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1		工作平台总成	1	详见图 4-2	
2	GB70-85	螺钉 M12×55	8	8.8	300040020105
3	GB93-87	垫圈 12	8		300030010002
4	GB97.1-85	垫圈 12	8		300030040003
5	GB97.1-85	垫圈 24	1		300030040007
6	GB889-86	螺母 M24	1		300020150002
7	GTHZ210C-751000-G00	螺栓 M24×300	1	10.9	227000070025
8	GB70-85	螺钉 M10×35	8	8.8	300040020129
9	GB97.1-85	垫圈 12	8		300030040002
10	GTHZ210C-750400-G00	称重传感器	1		227400050002
11		小臂总成	1	详见图 3-6	

图 4-2 工作平台总成

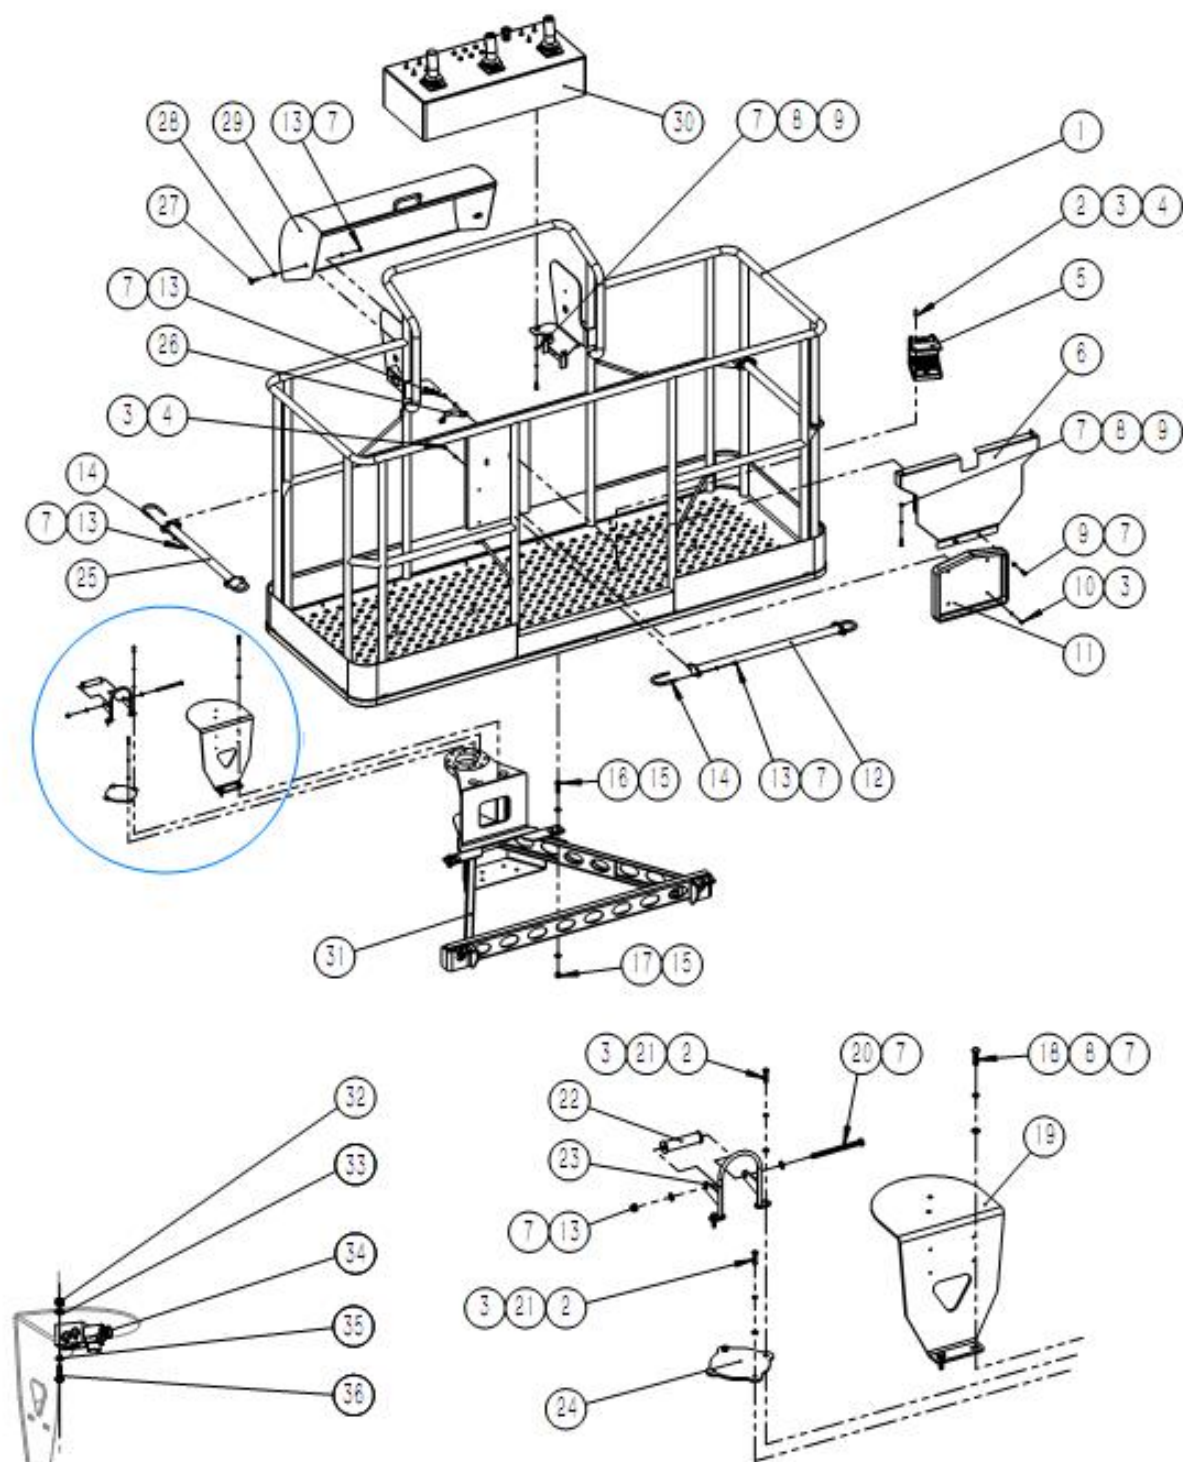


图 4-2 工作平台总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-810100-000	围栏焊接体	1		228100000078
2	GB5783-86	螺栓 M6×25	9	8.8	300010040153
3	GB97.1-85	垫圈 6	20		300030040013
4	GB889-86	螺母 M6	8	8	300020150005
5	GTHZ210C-750300-G00	脚踏开关	1		227200080004
6	GTHZ210C-810003-000	注意事项张贴板	1		228100030181
7	GB97.1-85	垫圈 8	26	8	300030040014
8	GB93-87	垫圈 8	6		300030010015
9	GB5783-86	M8×25	6	8.8	300010040177
10	GB5783-86	螺栓 M6×16	1	8.8	300010040148
11	78XEN-820100-G00	文件盒	1		228000000009
12	GTHZ210C-810200-000	活动杆焊接体	1		228100000080
13	GB889-86	螺母 M8	17	8	300020150004
14	GTHZ210C-810002-000	活动杆 U 型环	6		228100070016
15	GB97.1-85	垫圈 12	8		300030040003
16	GB5783-86	螺栓 M12×40	4	8.8	300010040037
17	GB889-86	M12	4	8	300020150006
18	GB5783-86	螺栓 M8×30	2	8.8	300010040178
19	GTHZ210C-810008-000	阀块安装板	1		228100030182
20	GB5783-86	螺栓 M8×110	1	8.8	300010040164
21	GB93-87	垫圈 6	4		300030010014
22	GTHZ210C-810009-000	尼龙滚轮	1		228100060058
23	GTHZ210C-810600-000	走线环	1		228100000083
24	GTHZ210C-810007-000	盖板	1		228100010094
25	GTHZ210C-810500-000	短活动杆焊接体	2		228100000082

图 4-2 工作平台总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
26	GTHZ210C-810006-000	半圆线夹	1		228000020016
27	GTHZ210C-810004-000	控制箱盖板轴	2		228100070017
28	GTHZ210C-810005-000	控制箱盖板轴套	2		228000050006
29	GTHZ210C-810300-000	控制盒罩板焊接体	1		228100000081
30	GTHZ210C-720000-001	上控总成	1		227500040024
31	GTHZ210C-810400-000	围栏底座焊接体	1		228100000079
32	GB70-85	螺栓 M5×50	2		300040020123
33	GB93-87	弹簧垫圈 5	2		300030010013
34	HZ210AI-640300-G01	平台控制阀	1		226400020007
35	GB97.1-85	平垫圈 5	2		300030040012
36	GB889-86	螺母 M5	2		300020150018

第五章 液压系统

图 5-1 液压油路

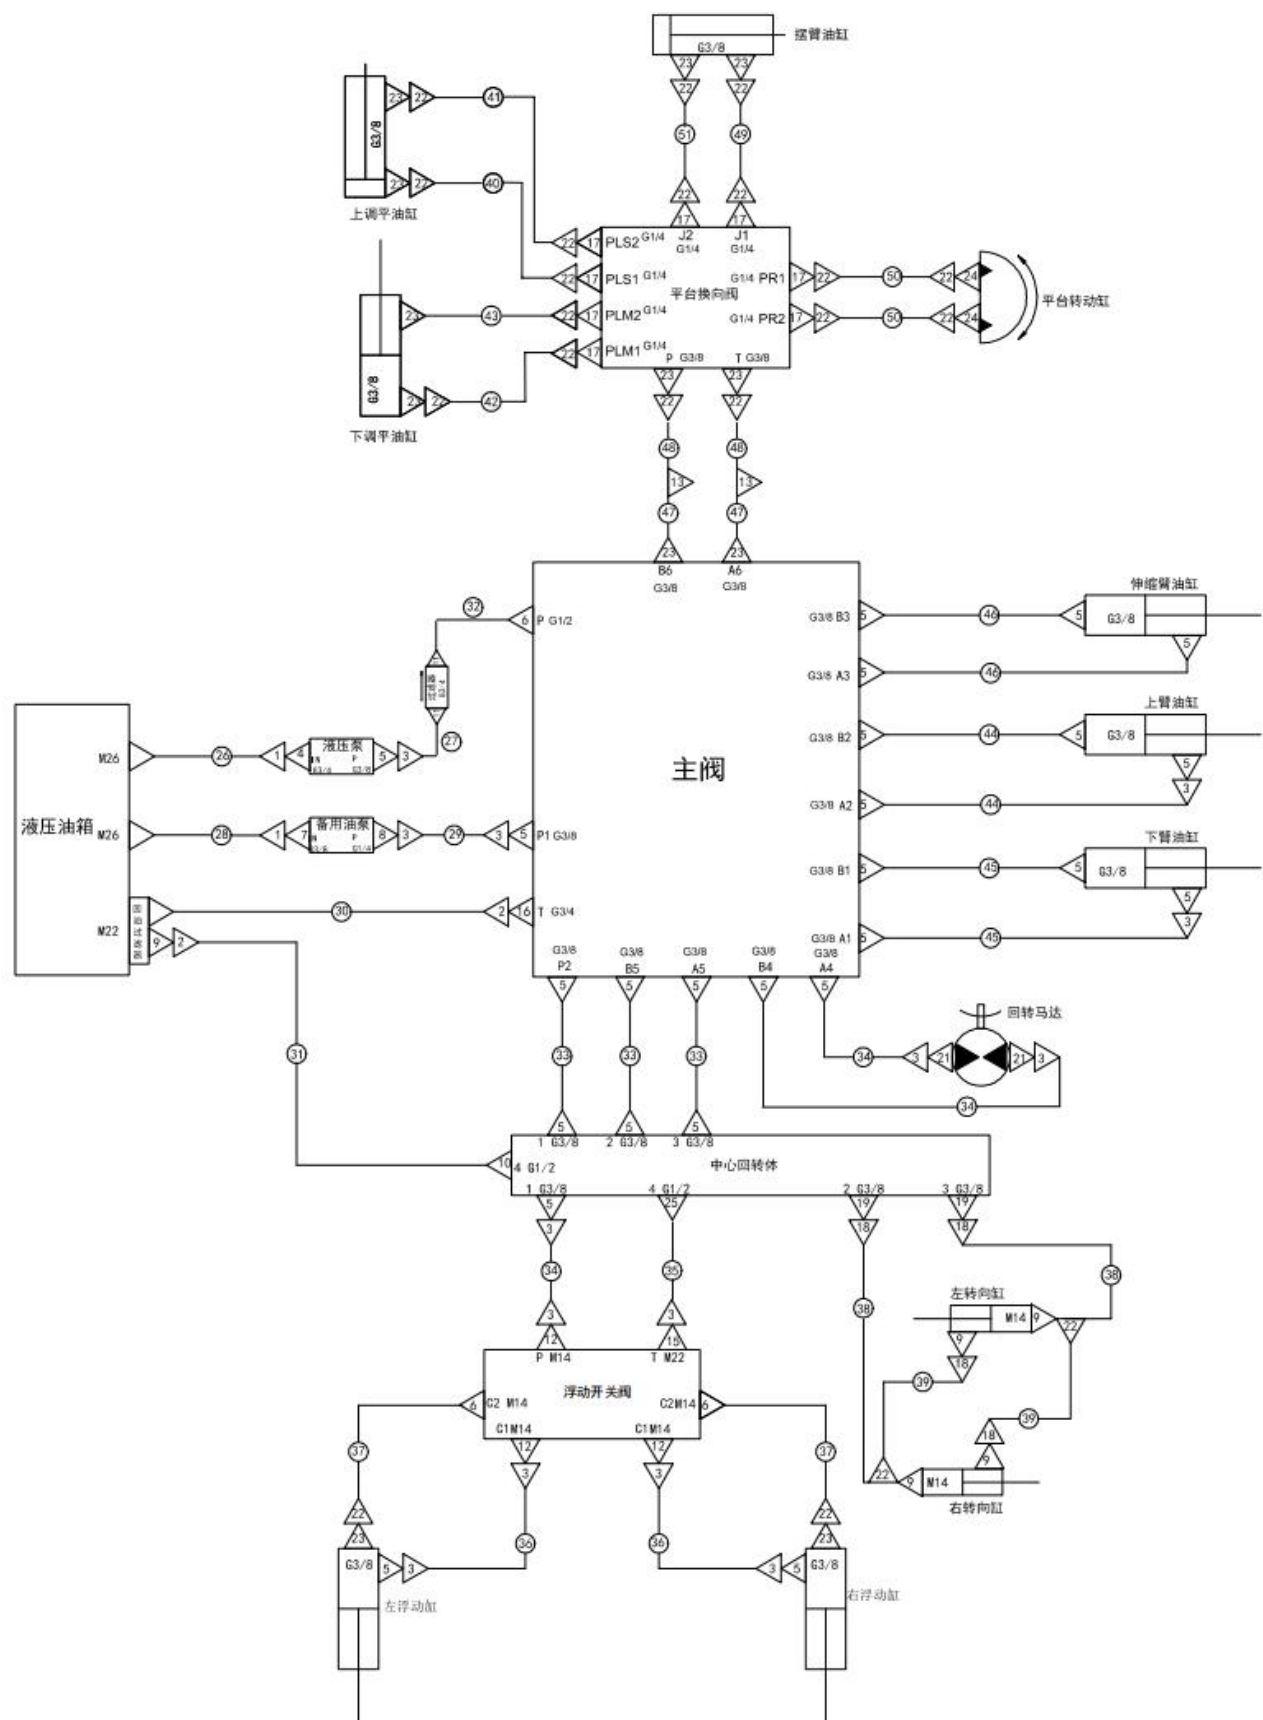


图 5-1 液压油路

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	JT-202626-G01	直角接头	2		226000040084
2	JT-202222-G01	直角接头	1		226000040075
3	JT-201818-G01	直角接头	17		226000040074
4	JT-111226-G01	过渡接头	1		226000040055
5	JT-110618-G00	过渡接头	25		226300030006
6	JT-101414-G01	过渡接头	2		226000040126
7	JT-110626-G01	过渡接头	1		226000040069
8	JT-110418-G01	过渡接头	1		226000040112
9	JT-101416-G01	过渡接头	4		226000040120
10	JT-110822-G01	过渡接头	1		226000040109
11	JT-111218-G01	过渡接头	2		226000040071
12	JT-101418-G01	过渡接头	3	2022. 11. 29	226000040119
13	JT-131414-G01	过板接头	2		226000040117
14	JT-110818-G02	过渡接头	1		226000040133
15	JT-102218-G00	过渡接头	1		226000040091
16	JT-111222-G00	过渡接头	1		226000050036
17	JT-110414-G01	过渡接头	8		226000040081
18	JT-201616-G01	直角接头	4		226000040073
19	JT-110616-G01	过渡接头	2		226000040067
20	JT-301616-G01	三通接头	2		226000040078
21	JT-131418-G01	过渡接头	2		226000040079
22	JT-201414-G01	直角接头	19		226000040082
23	JT-110614-G00	过渡接头	12		226000040040
24	JT-110714-G01	过渡接头	2		226000040118
25	JT-110818-G00	过渡接头	1		226000040089
26	GTHZ210C-630101-000	高压胶管	1		226300010145

图 5-1 液压油路

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
27	HZ210AI-630102-001	高压胶管	1		226300010249
28	GTHZ210C-630103-000	高压胶管	1		226300010142
29	HZ210AI-630104-001	高压胶管	1		226300010251
30	HZ210AI-630105-001	高压胶管	1		226300010252
31	GTHZ210C-630106-000	高压胶管	1		226300010143
32	HZ210AI-630107-000	高压胶管	1		226300010300
33	HZ210AI-630109-001	高压胶管	3		226300010253
34	HZ210AI-630110-001	高压胶管	3		226300010254
35	GTHZ210C-630111-000	高压胶管	1		226300010151
36	HZ210AI-630112-000	高压胶管	2		226300010301
37	HZ210AI-630113-000	高压胶管	2		226300010299
38	GTHZ210C-630125-000	高压胶管	2		226300010167
39	GTHZ210C-630114-000	高压胶管	2		226300010138
40	HZ210AI-630115-000	高压胶管	1		226300010302
41	HZ210AI-630116-000	高压胶管	1		226300010303
42	HZ210AI-630117-001	高压胶管	1		226300010260
43	HZ210AI-630118-001	高压胶管	1		226300010261
44	HZ210AI-630119-001	高压胶管	2		226300010256
45	HZ210AI-630120-001	高压胶管	2		226300010255
46	HZ210AI-630121-001	高压胶管	2		226300010257
47	HZ210AI-630126-001	高压胶管	2		226300010258
48	GTHZ210C-630122-000	高压胶管	2		226300010162
49	HZ210AI-630123-000	高压胶管	1		226300010304
50	HZ210AI-630124-000	高压胶管	2		226300010306
51	HZ210AI-630127-000	高压胶管	1		226300010305

图 5-2 油箱总成

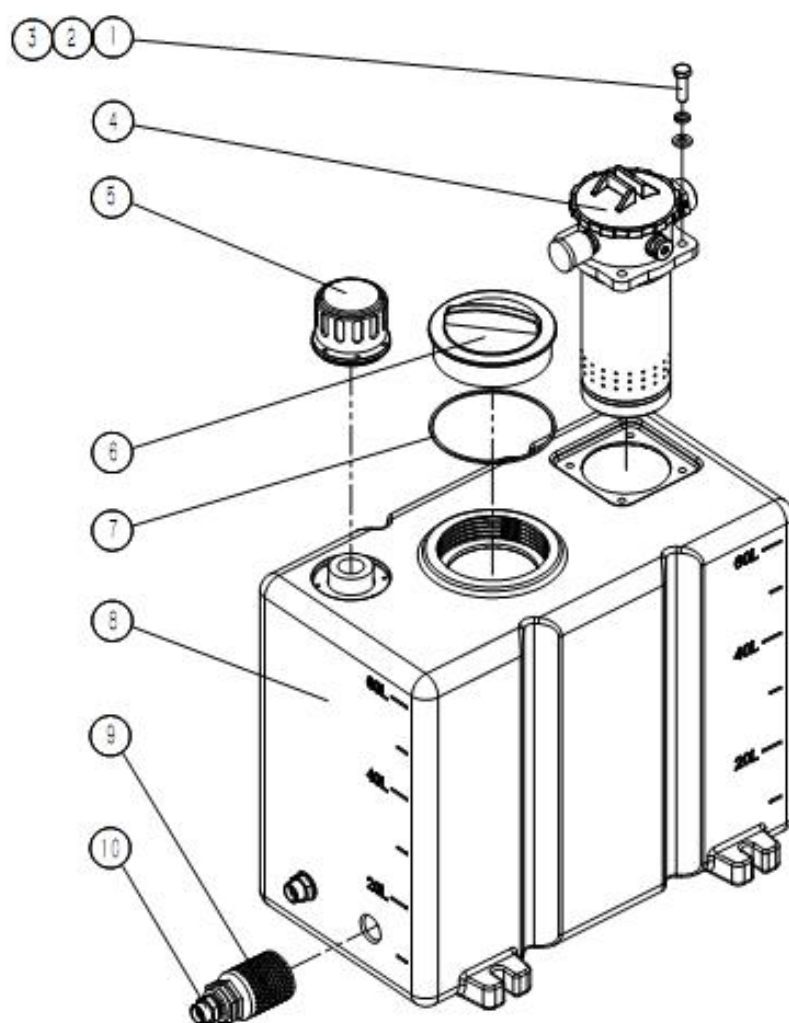


图 5-2 油箱总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GB70-85	螺栓 M8×20	4		300040020097
2	GB93-87	垫圈 8	4		300030010015
3	GB97.1-85	垫圈 8	4		300030040014
4	GTHZ210C-610200-G00	回油过滤器	1		
5	GTHZ210C-610300-G00	空气过滤器	1		
6	GTHZ210C-610400-G00	油箱盖	1		
7	GTHZ210C-610001-G00	密封垫	1		
8	GTHZ210C-610100-G00	油箱体	1		
9	GTHZ210C-610500-G00	吸油过滤器	2		
10	GTHZ210C-610002-G00	吸油接头	2		

图 5-3 浮动油缸组件

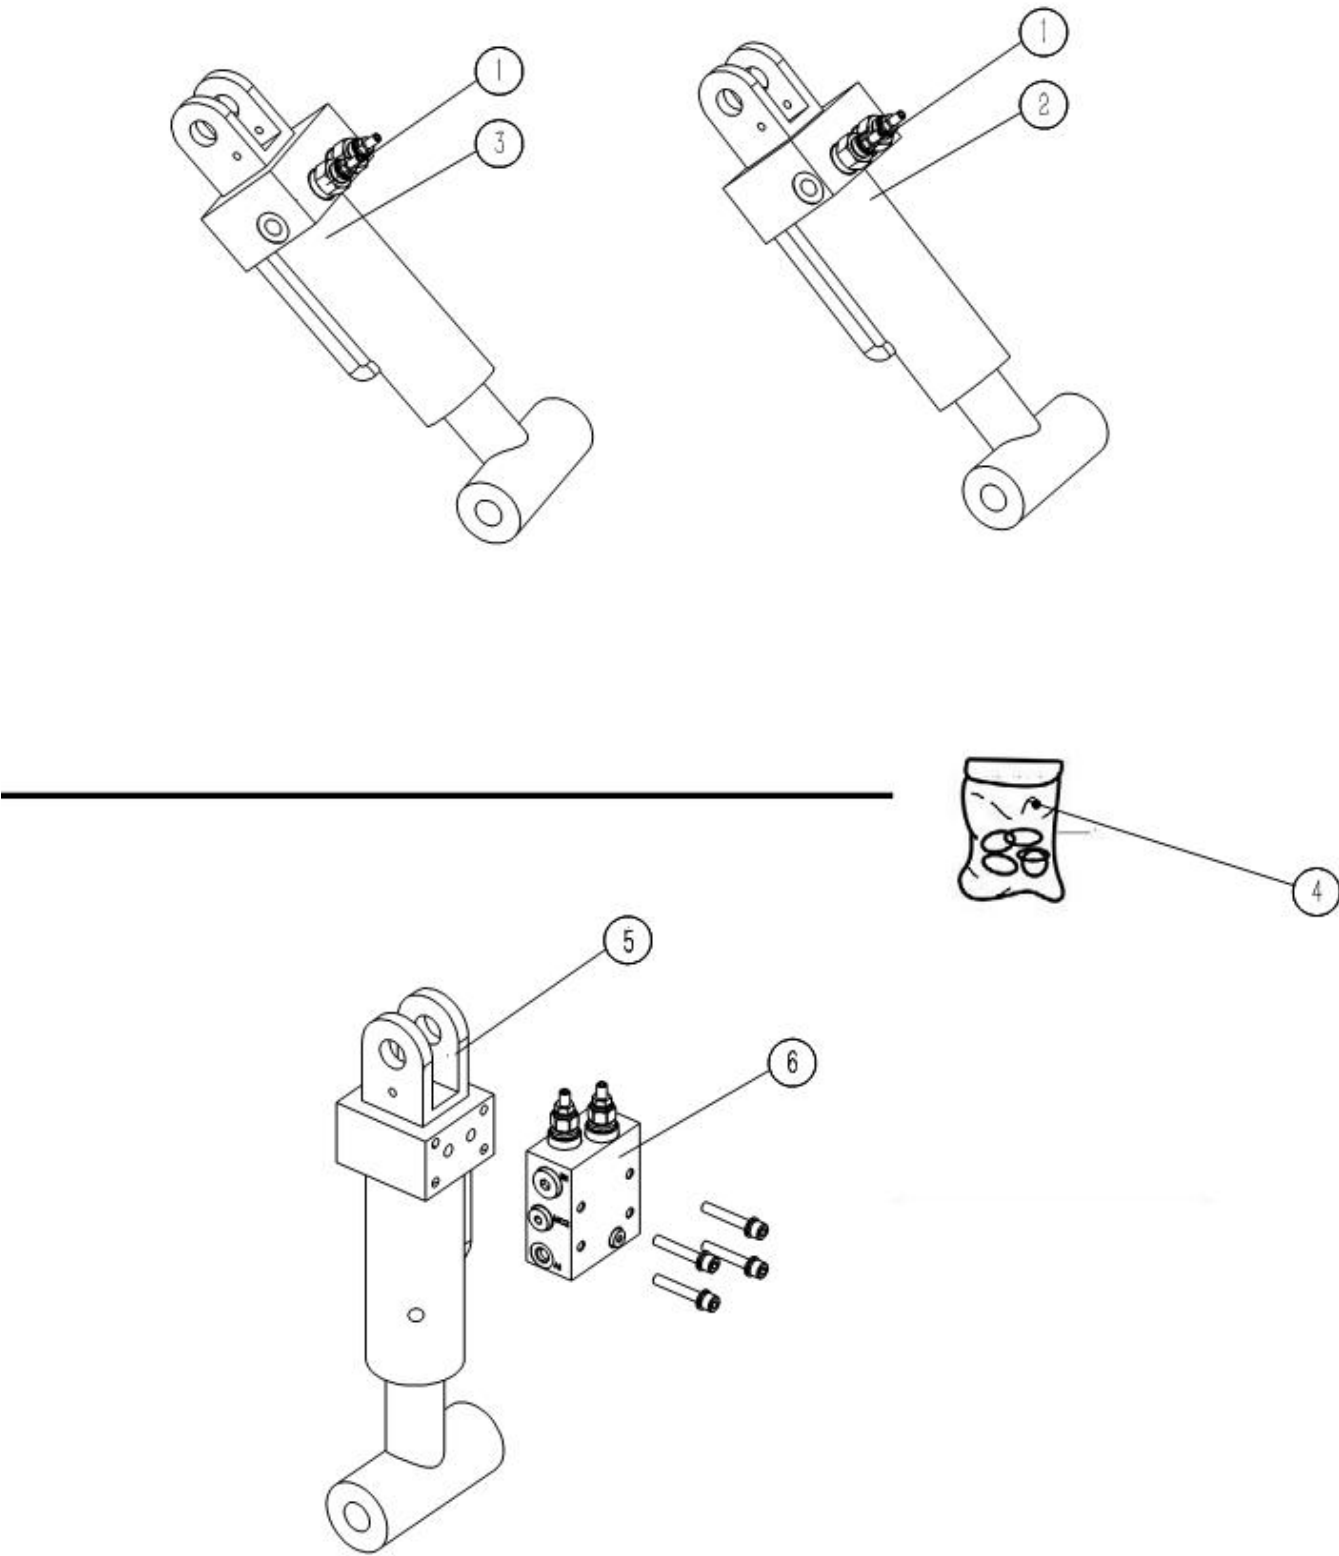


图 5-3 浮动油缸组件

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	HZ210AI-640710-G01	浮动油缸阀芯	4		226400080007
2	GTHZ210C-620200-000	左浮动油缸	1		226200070012
3	GTHZ210C-620200-001	右浮动油缸	1		226200070018
4	GTHZ210C-620210-000	密封组件	1		
5	HZ210AI-620200-000	浮动油缸	2	2022. 11. 29	226200070024
6	HZ210AI-640700-G00	浮动平衡阀	2	2022. 11. 29	226400040019

图 5-4 下臂油缸组件

500 500 500 500

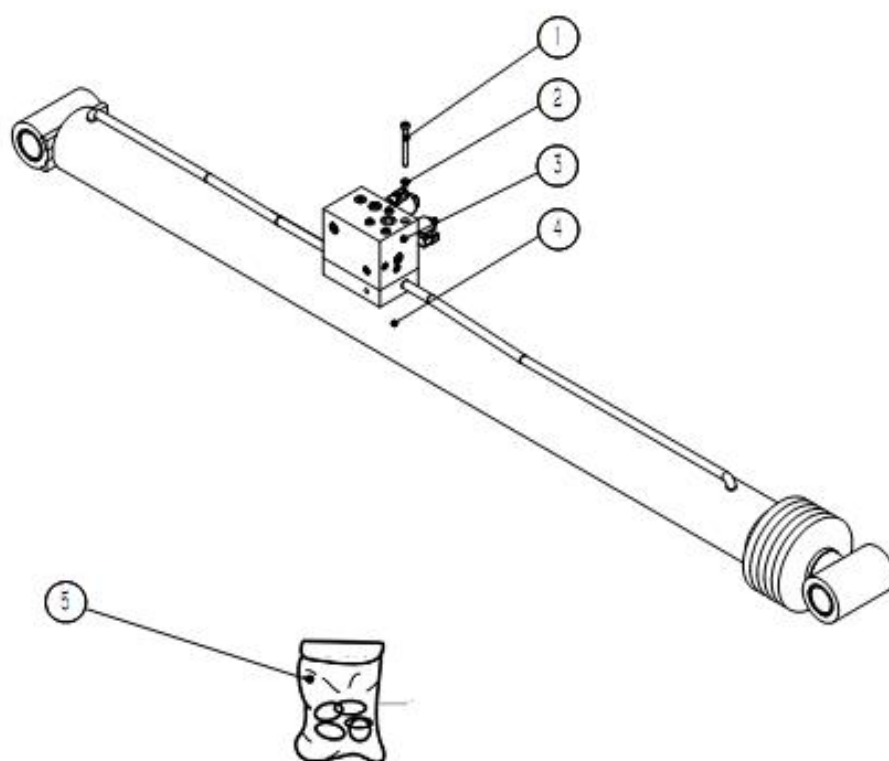


图 5-4 下臂油缸组件

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GB70-85	螺栓 M8×120	4		
2	GB93-87	垫圈 8	4		300030010015
3	HZ210AI-640200-G01	变幅控制阀	1		226400030006
4	GTHZ210C-620400-000	下油缸	1		226200010021
5	GTHZ210C-620410-000	密封组件	1		

图 5-5 上臂油缸组件

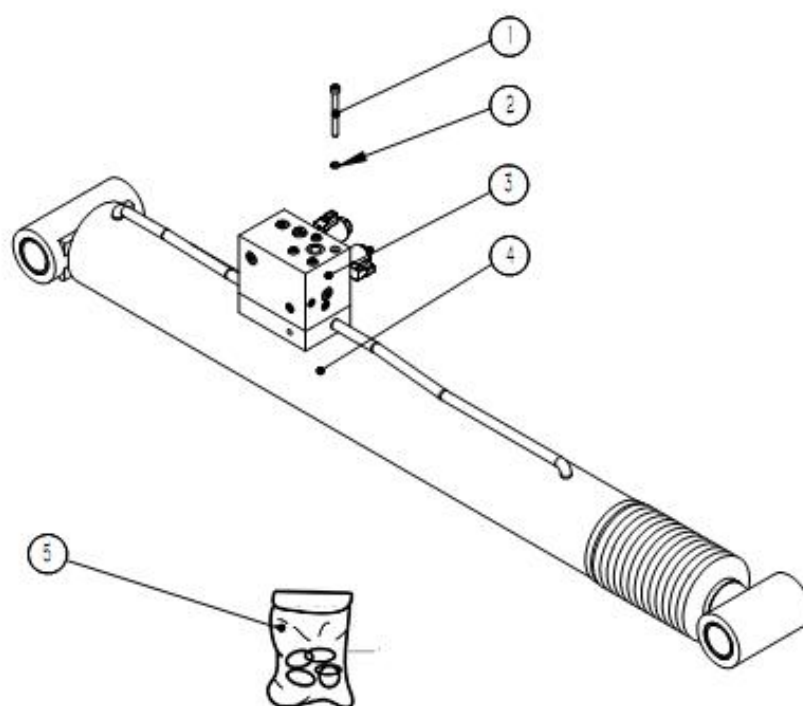


图 5-5 上臂油缸组件

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GB70-85	螺栓 M8×90	4		
2	GB93-87	垫圈 8	4		300030010015
3	HZ210AI-640200-G01	液压比例下放阀	1		226400030006
4	GTHZ210C-620500-000	上油缸	1		226200010022
5	GTHZ210C-620510-000	密封组件	1		

图 5-6 伸缩臂油缸组件

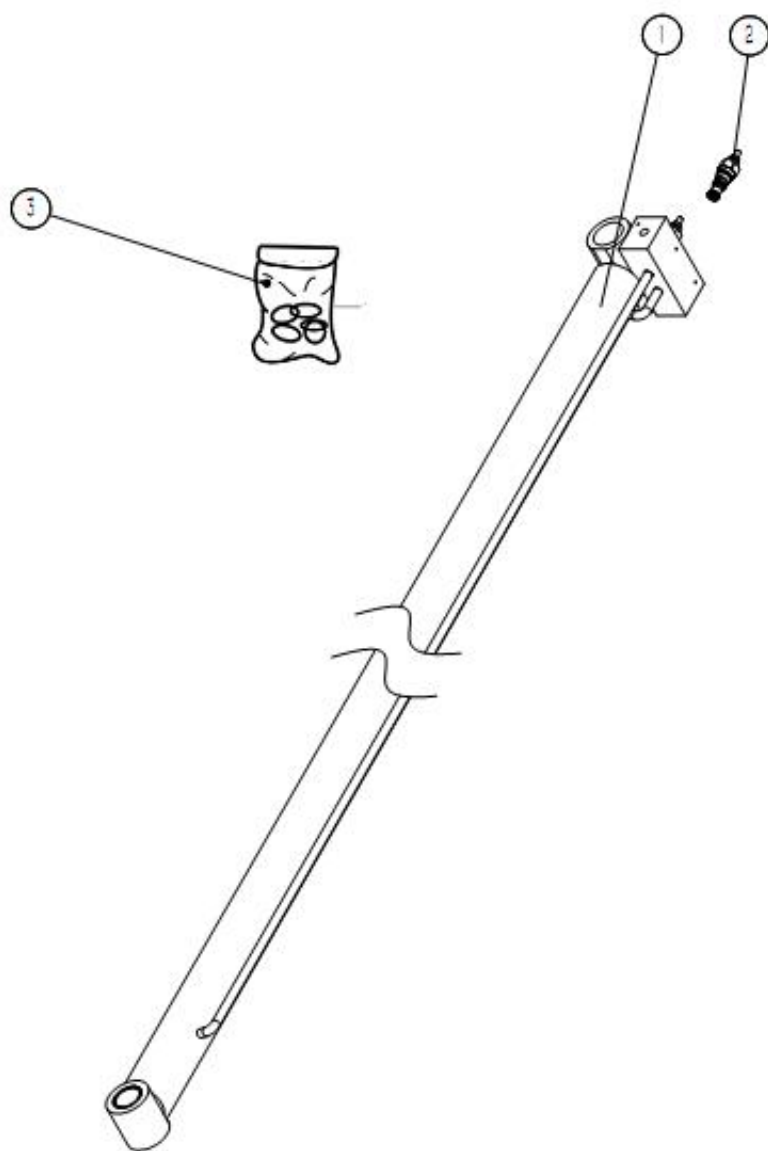


图 5-6 伸缩臂油缸组件

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-620800-000	伸缩臂油缸	1		226200030002
2	HZ210AI-640810-G01	伸缩臂油缸阀芯	2		226400080006
3	GTHZ210C-620810-000	密封组件	1		

图 5-7 上调平油缸组件

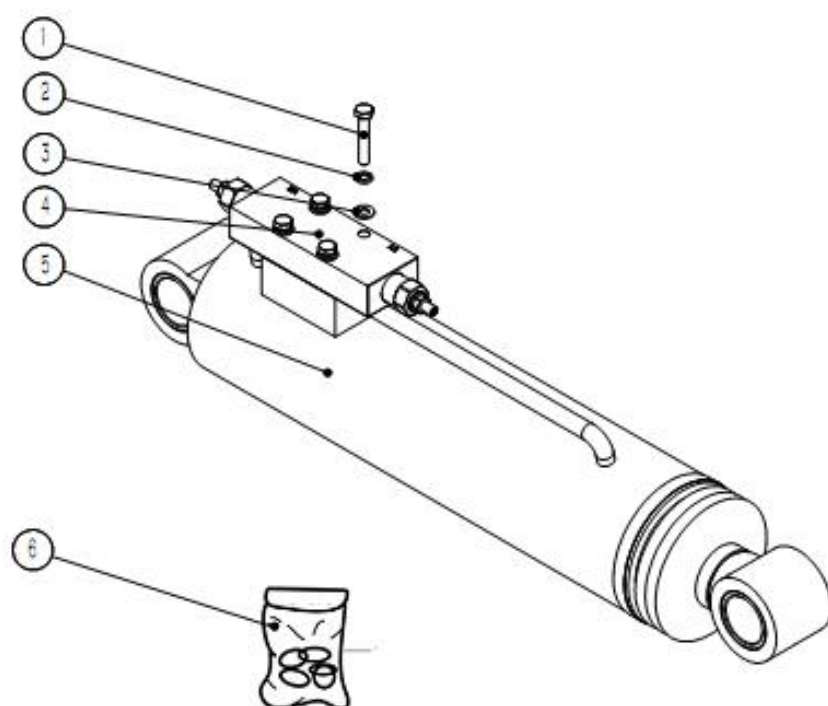


图 5-7 上调平油缸组件

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GB5783-86	螺栓 M8×40	4		
2	GB93-87	垫圈 8	4		300030010015
3	GB97. 1-85	垫圈 8	4		300030040014
4	HZ210AI-640400-G01	双向平衡阀	1		226400040017
5	GTHZ210C-620700-001	上调平油缸	1		226200050011
6	GTHZ210C-620710-000	密封组件	1		

图 5-8 摆臂油缸组件

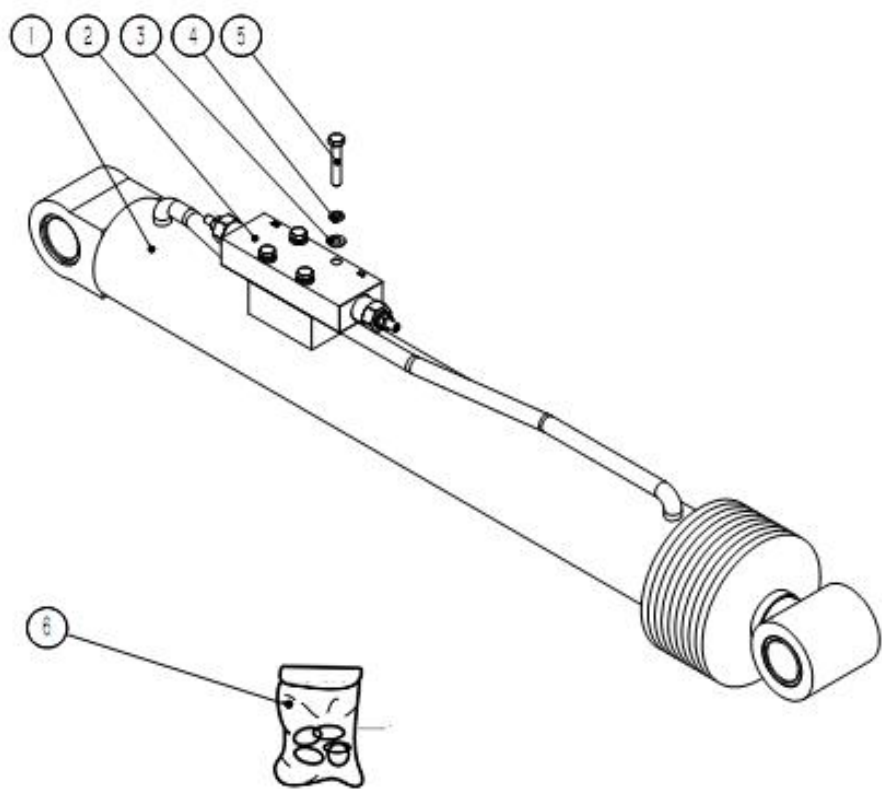


图 5-8 摆臂油缸组件

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-620900-001	小臂油缸	1		226200010029
2	HZ210AI-640400-G01	双向平衡阀	1		226400040017
3	GB97.1-85	垫圈 8	4		300030040014
4	GB93-87	垫圈 8	4		300030010015
5	GB5783-86	螺栓 M8×40	4		
6	GTHZ210C-620910-001	密封组件	1		

第六章 电气系统

图 6-1 线束总成

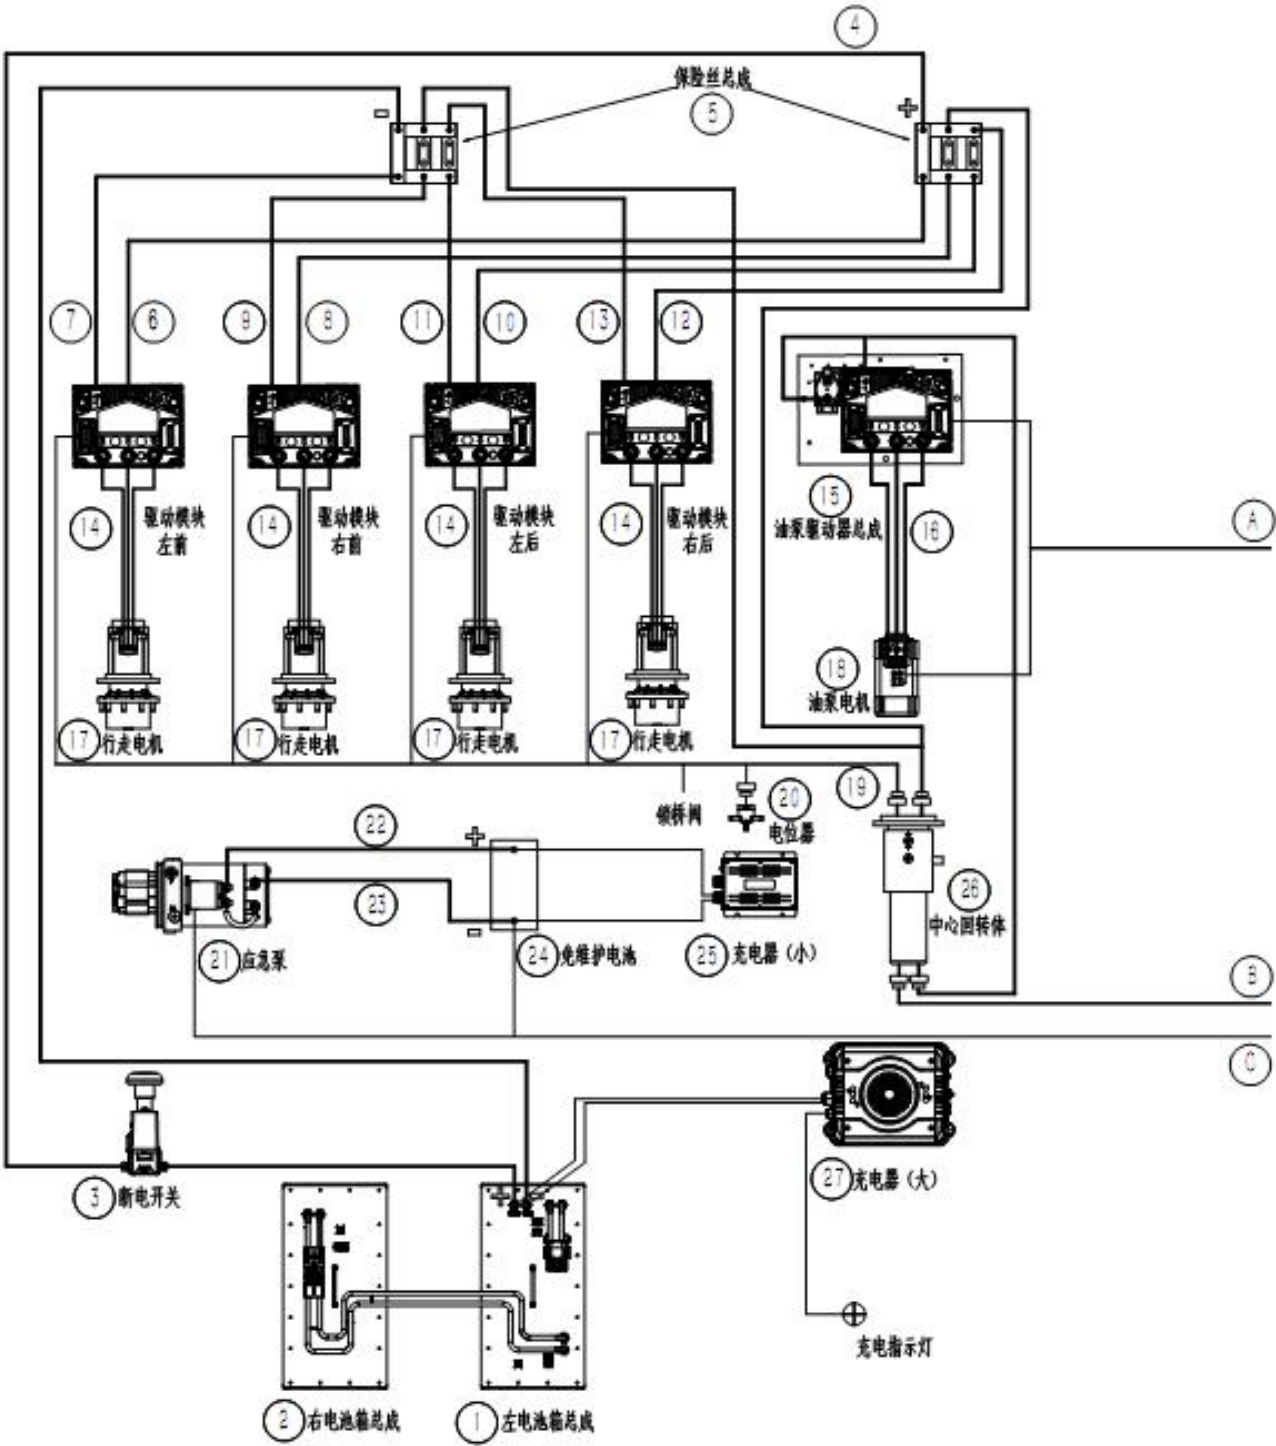


图 6-1 线束总成（续）

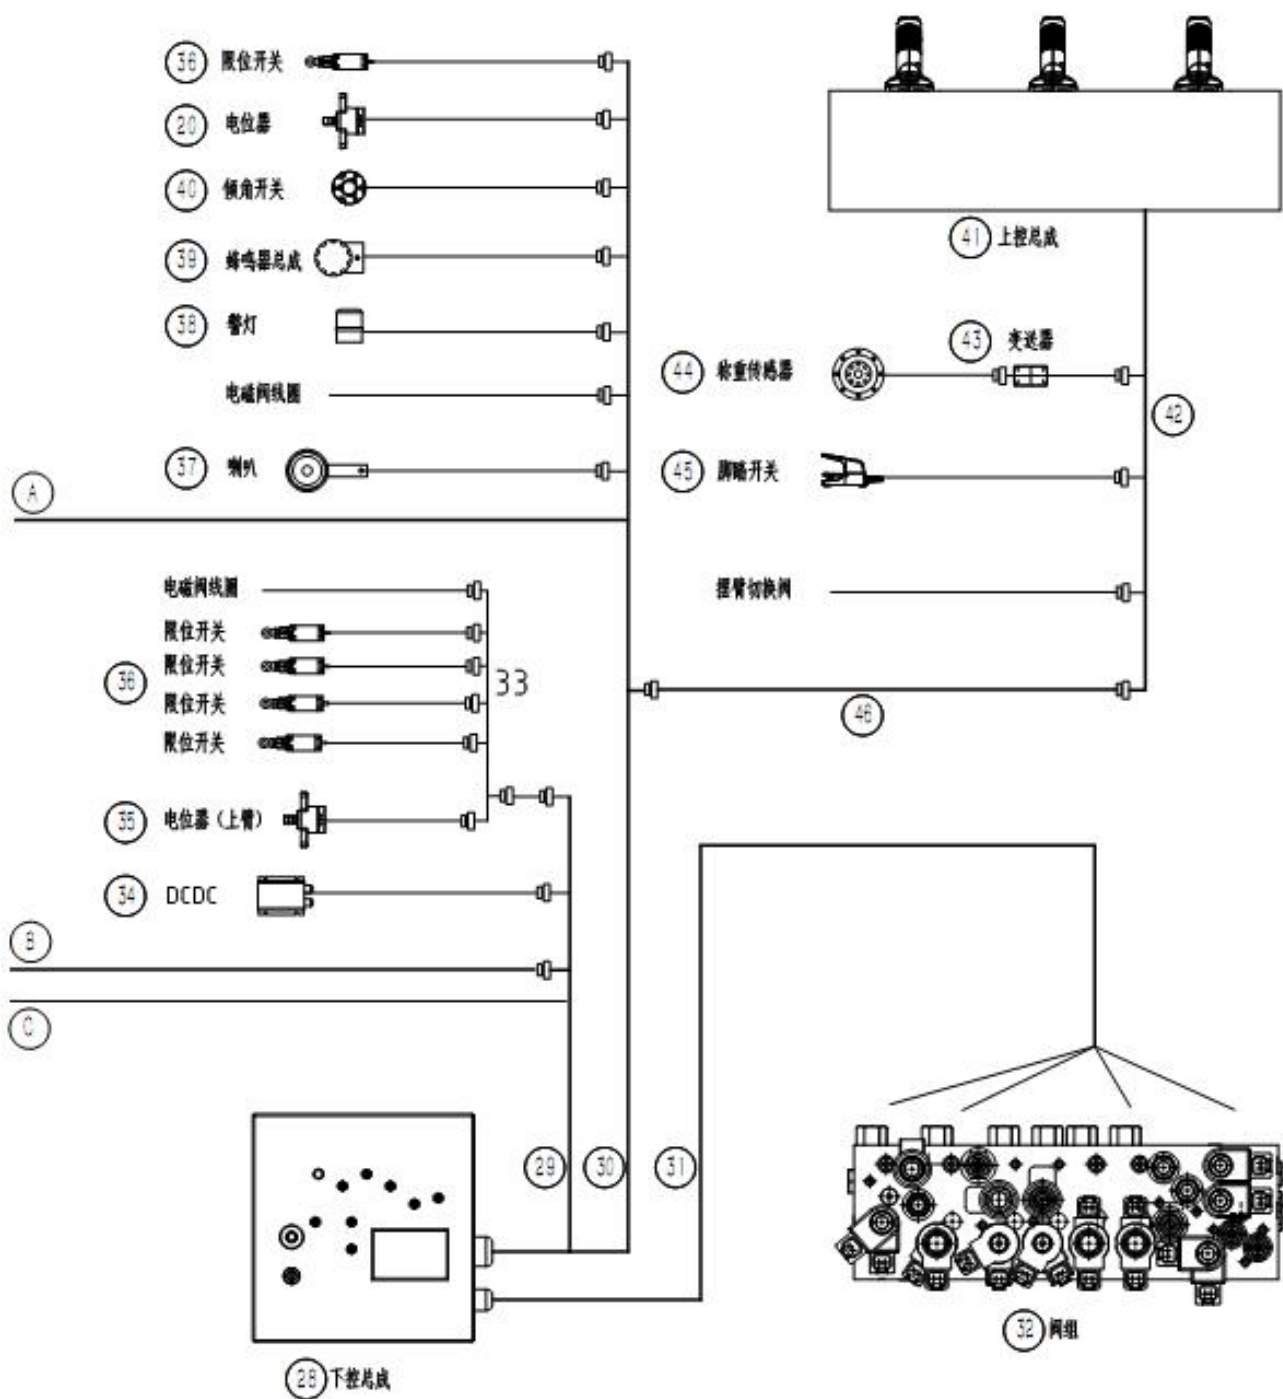


图 6-1 线束总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-760100-000	左电池箱总成	1		227600030007
2	GTHZ210C-760200-000	右电池箱总成	1		227600030006
3	GTHZ170C-750100-G00	断电开关	1		227200010003
4	GTHZ210C-730100-000	电缆线	1		227300010123
5		保险丝总成	1	详见图 6-3	
6	GTHZ210C-730200-000	电缆线	1		227300010124
7	GTHZ210C-730300-000	电缆线	1		227300010125
8	GTHZ210C-730400-000	电缆线	1		227300010126
9	GTHZ210C-730500-000	电缆线	1		227300010127
10	GTHZ210C-730600-000	电缆线	1		227300010128
11	GTHZ210C-730700-000	电缆线	1		227300010129
12	GTHZ210C-730800-000	电缆线	1		227300010130
13	GTHZ210C-730900-000	电缆线	1		227300010131
14	GTHZ210C-750200-G00	驱动模块	4		227500020005
15	GTHZ210C-751100-000	油泵驱动器总成	1		227500020006
16	GTHZ210C-731000-000	电缆线	1		227300010133
17	GTHZ210C-130000-G00	行走减速器	4		221300000006
18	XPD090-621000-000	油泵电机	1		209100020186
19	GTHZ210C-740800-000	驱动线束总成	1		227100010027
20	60XEND-741200-G01	电位器	2		227400010013
21	GTHZ210C-650100-G00	应急泵	1		226500010005
22	GTHZ210C-731100-000	电缆线	1		227300010134
23	GTHZ210C-731200-000	电缆线	1		227300010135
24	60XEND-760100-G00	免维护电池	1		227600020003
25	GTHZ210C-750800-G00	充电器（小）	1		227800010009

图 6-1 线束总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
26	GTHZ210C-400900-G00	中心回转体	1		224000000093
27	GTHZ210C-750700-G00	充电器（大）	1		227800010008
28	GTHZ210C-710000-001	下控总成	1	详见图 6-4	227500040023
29	GTHZ210C-740100-002	主线束	1		227100010059
32	GTHZ210C-640101-G00	阀组	1		226400010011
33	GTHZ210C-740400-000	主线束 4	1		227100010025
34	GTHZ210C-751300-000	DCDC	1		227000070035
35	HZ210AI-741200-G00	电位器 2	1		227400010021
36	GTWZ110-750400-G00	限位开关	5		227200050006
37	N163-700009-000	喇叭	1		207900130006
38	AP251-700050-G00	警灯	1		207600070106
40	GTHZ210C-750600-G00	倾角开关	1		227200080005
41	GTHZ210C-720000-001	上控总成	1	详见图 6-5	227500040024
42	GTHZ210C-740700-002	上控箱线束	1		227100010060
44	GTHZ210C-750400-G00	称重传感器	1		227400050002
45	GTHZ210C-750300-G00	脚踏开关	1		227200080004
46	GTHZ210C-740600-000	手柄转接线	1		227100030028

图 6-2 油泵驱动器总成

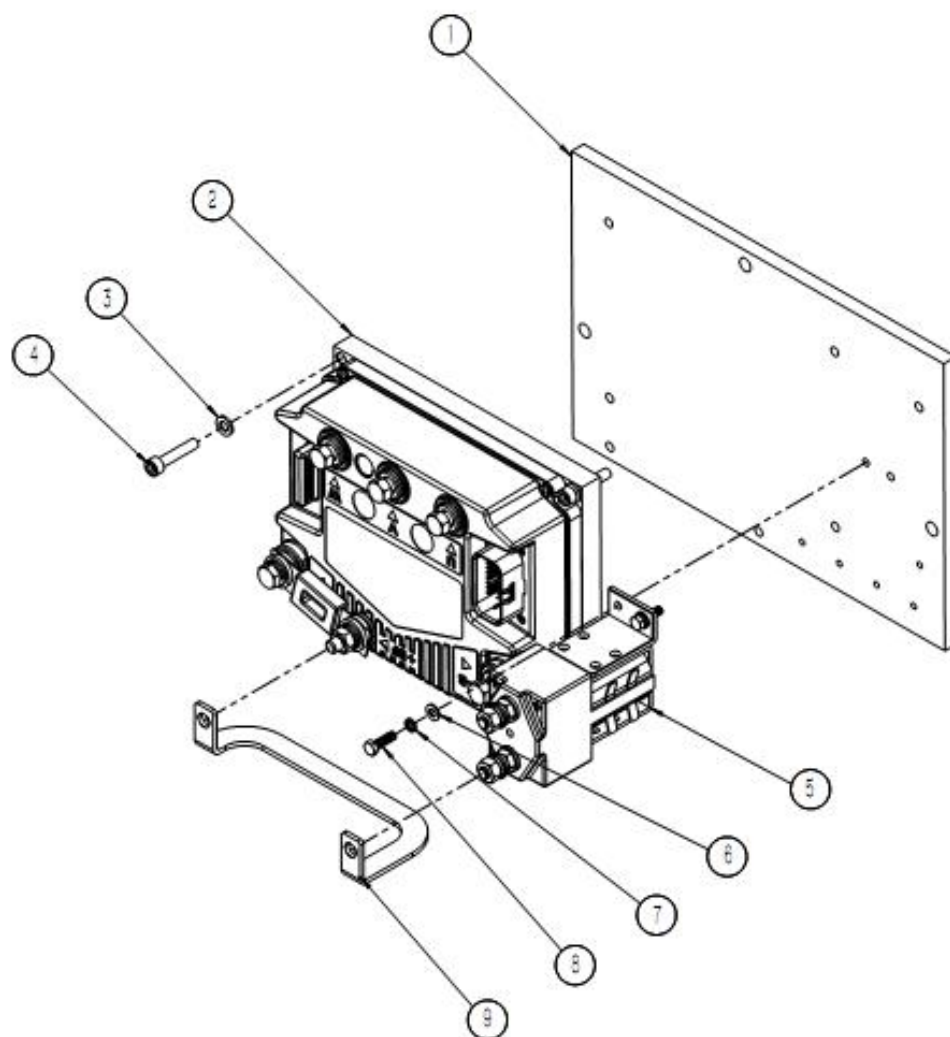


图 6-2 油泵驱动器总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-751104-G00	铝板	1		227000070033
2	GTHZ210C-750200-G00	驱动模块	1		227500020005
3	GB97.1-85	垫圈 6	4		300030040013
4	GB/T70.1-2000	螺钉 M6×30	4		300040020048
5	GTHZ210C-751102-G00	接触器	1		227500060003
6	GB97.1-85	垫圈 5	2		300030040012
7	GB93-87	垫圈 5	2		300030010013
8	GB5783-86	螺栓 M5×16	2		300010040138
9	GTHZ210C-751103-G00	铜片	1		227000070032

图 6-3 保险丝总成

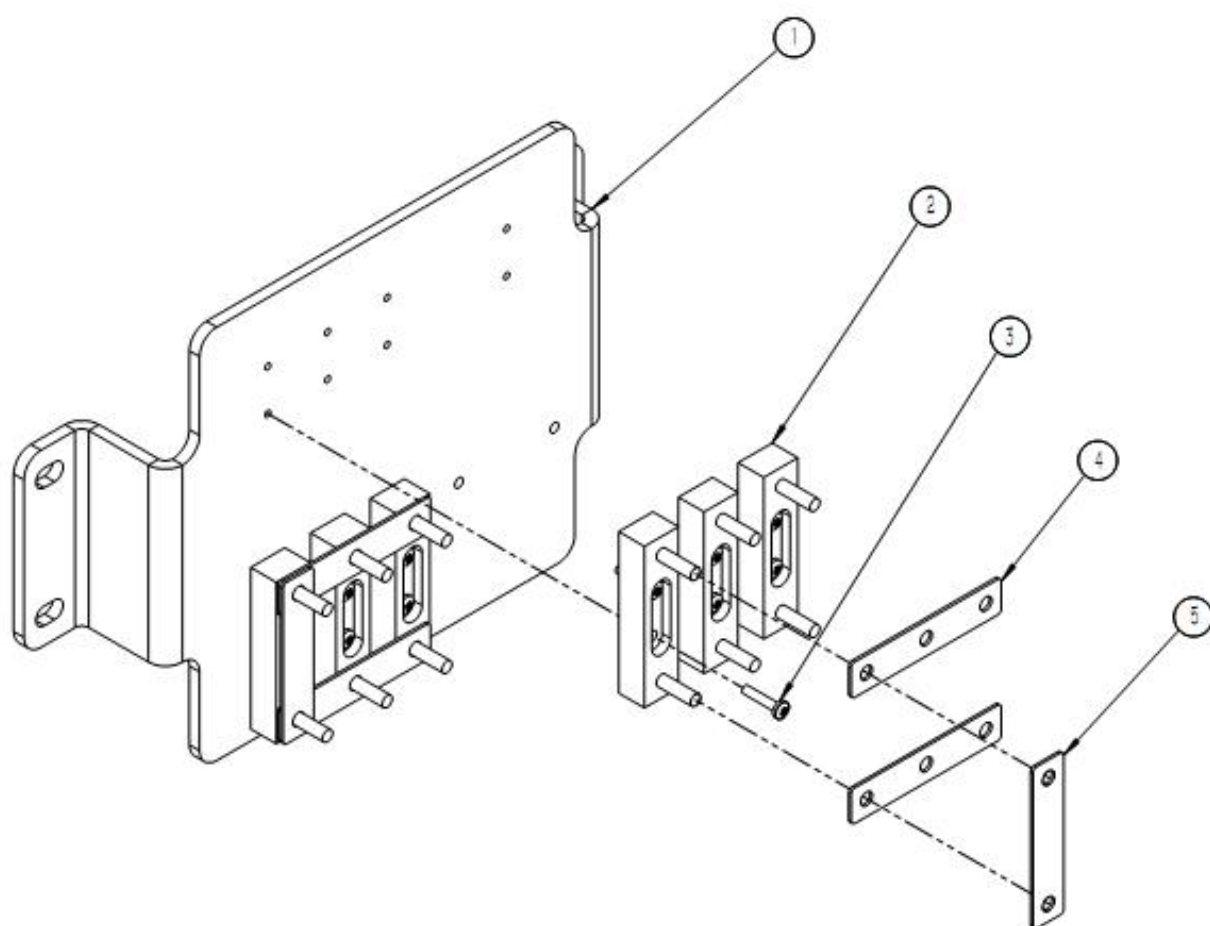


图 6-3 保险丝总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-400029-000	保险丝支架	1		224000040227
2	78XEN-740402-G00	200A 保险丝座	6		227500050007
3	GB818-85	螺钉 M4×20	12		300040070034
4	GTHZ210C-750900-000	保险丝铜条 B	4		227000070024
5	GTHZ210C-750500-000	保险丝铜条 A	2		227000070023

图 6-4 下控总成

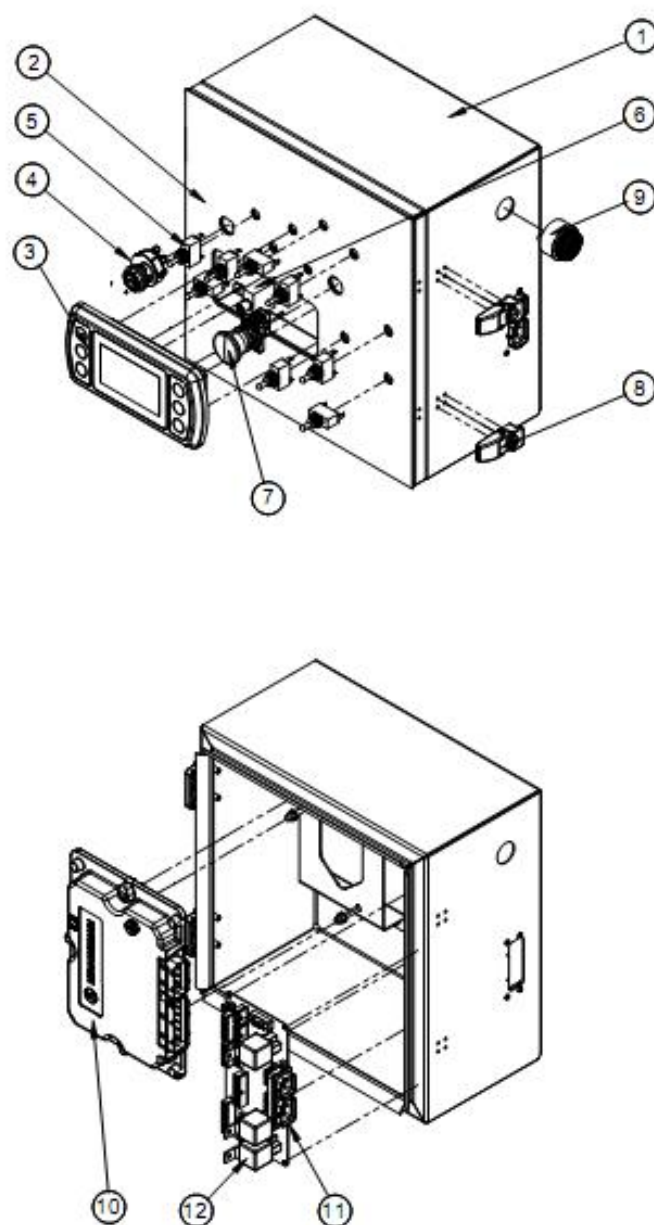


图 6-4 下控总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-710000-001	下控箱总成			
2	GTHZ210C-710100-000	下控箱 PC 膜	1		
3	GTHZ210C-710200-000	下显示屏	1		
4	GTHZ210C-710300-000	钥匙开关	1		
5	GTHZ210C-720500-000	拨档开关	8		
6	GTHZ210C-710400-000	保险按钮	1		
7	GTHZ210C-720900-000	急停开关	1		
8	GTHZ210C-721600-000	锁扣	2		
9	GTHZ210C-720600-000	蜂鸣器	1		
10	GTHZ210C-710500-000	下控制器	1		
11	GTHZ210C-710600-000	下控制箱电路集成板	1		
12	GTHZ210C-710700-000	继电器	3		

图 6-5 上控总成

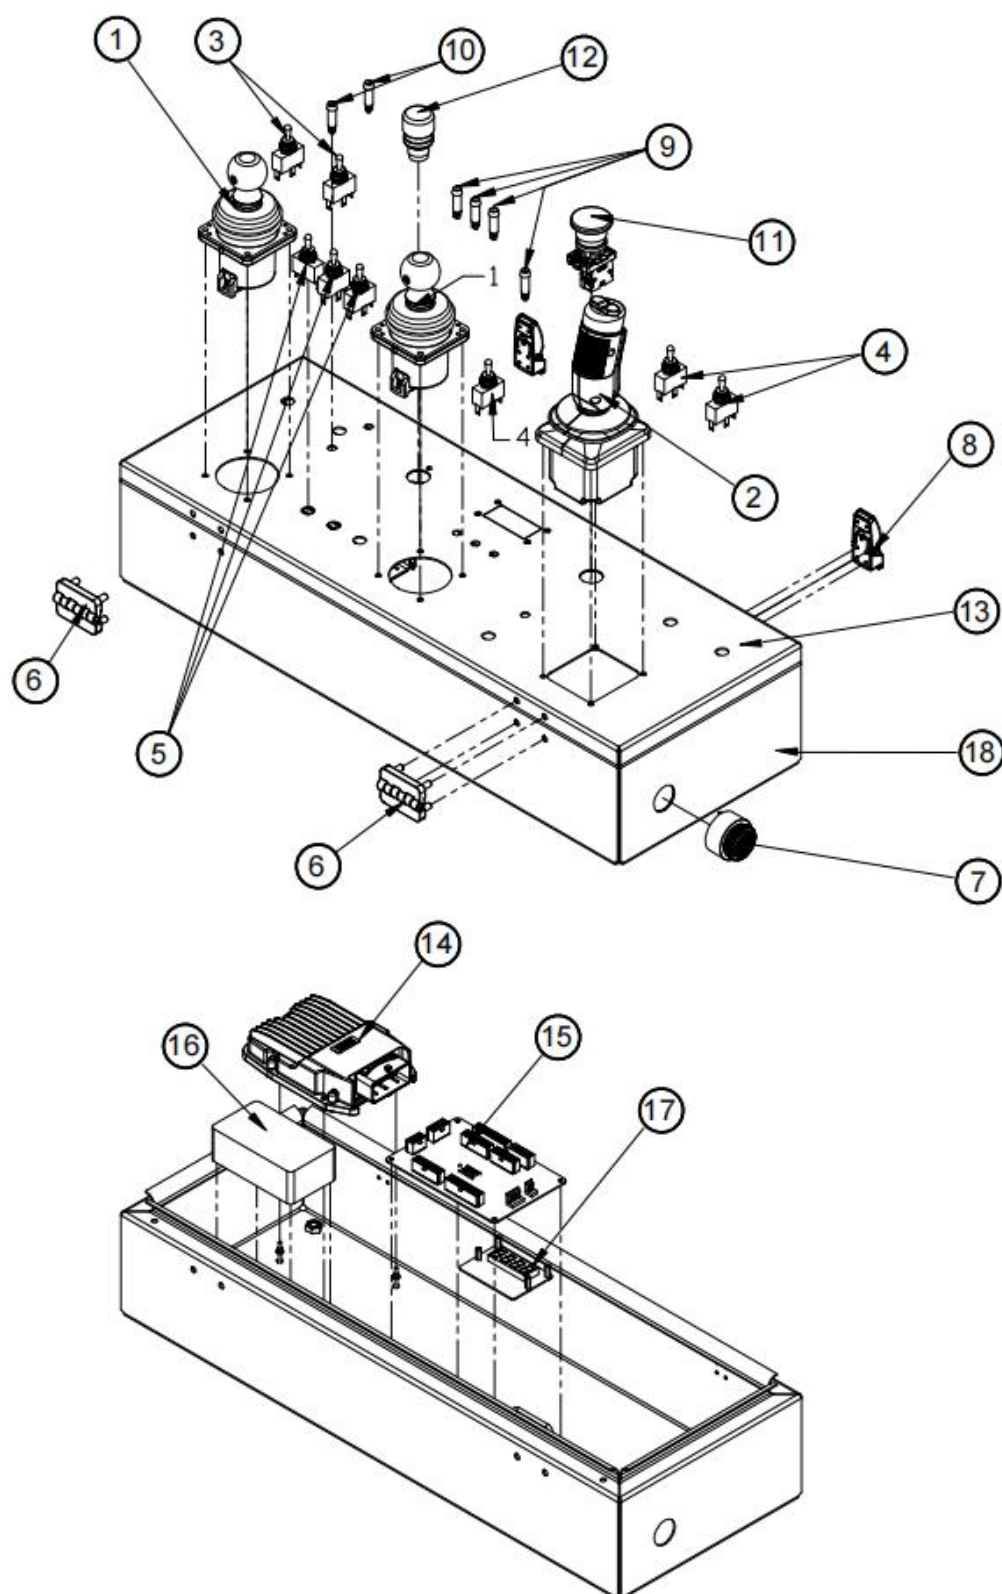


图 6-5 上控总成

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-720100-000	双轴手柄	2		
2	GTHZ210C-720200-000	单轴带开关手柄	1		
3	GTHZ210C-720300-000	拨档开关	2		
4	GTHZ210C-720400-000	拨档开关	3		
5	GTHZ210C-720500-000	拨档开关	3		
6	GTHZ210C-721500-000	合页	2		
7	GTHZ210C-720600-000	蜂鸣器	1		
8	GTHZ210C-721600-000	锁扣	2		
9	GTHZ210C-720700-000	指示灯	4		
10	GTHZ210C-720800-000	指示灯	2		
11	GTHZ210C-720900-000	急停开关	1		
12	GTHZ210C-721300-000	按钮	1		
13	GTHZ210C-721400-000	上控箱 PC 膜	1		
14	GTHZ210C-721000-000	上控制器	1		
15	GTHZ210C-721700-000	上控制箱电路集成 板	1		
16	GTHZ210C-721100-000	放大器	1		
17	GTHZ210C-721200-000	上显示屏	1		
18	GTHZ210C-720000-001	上控箱总成			

第七章 标识

图 7-1 标识

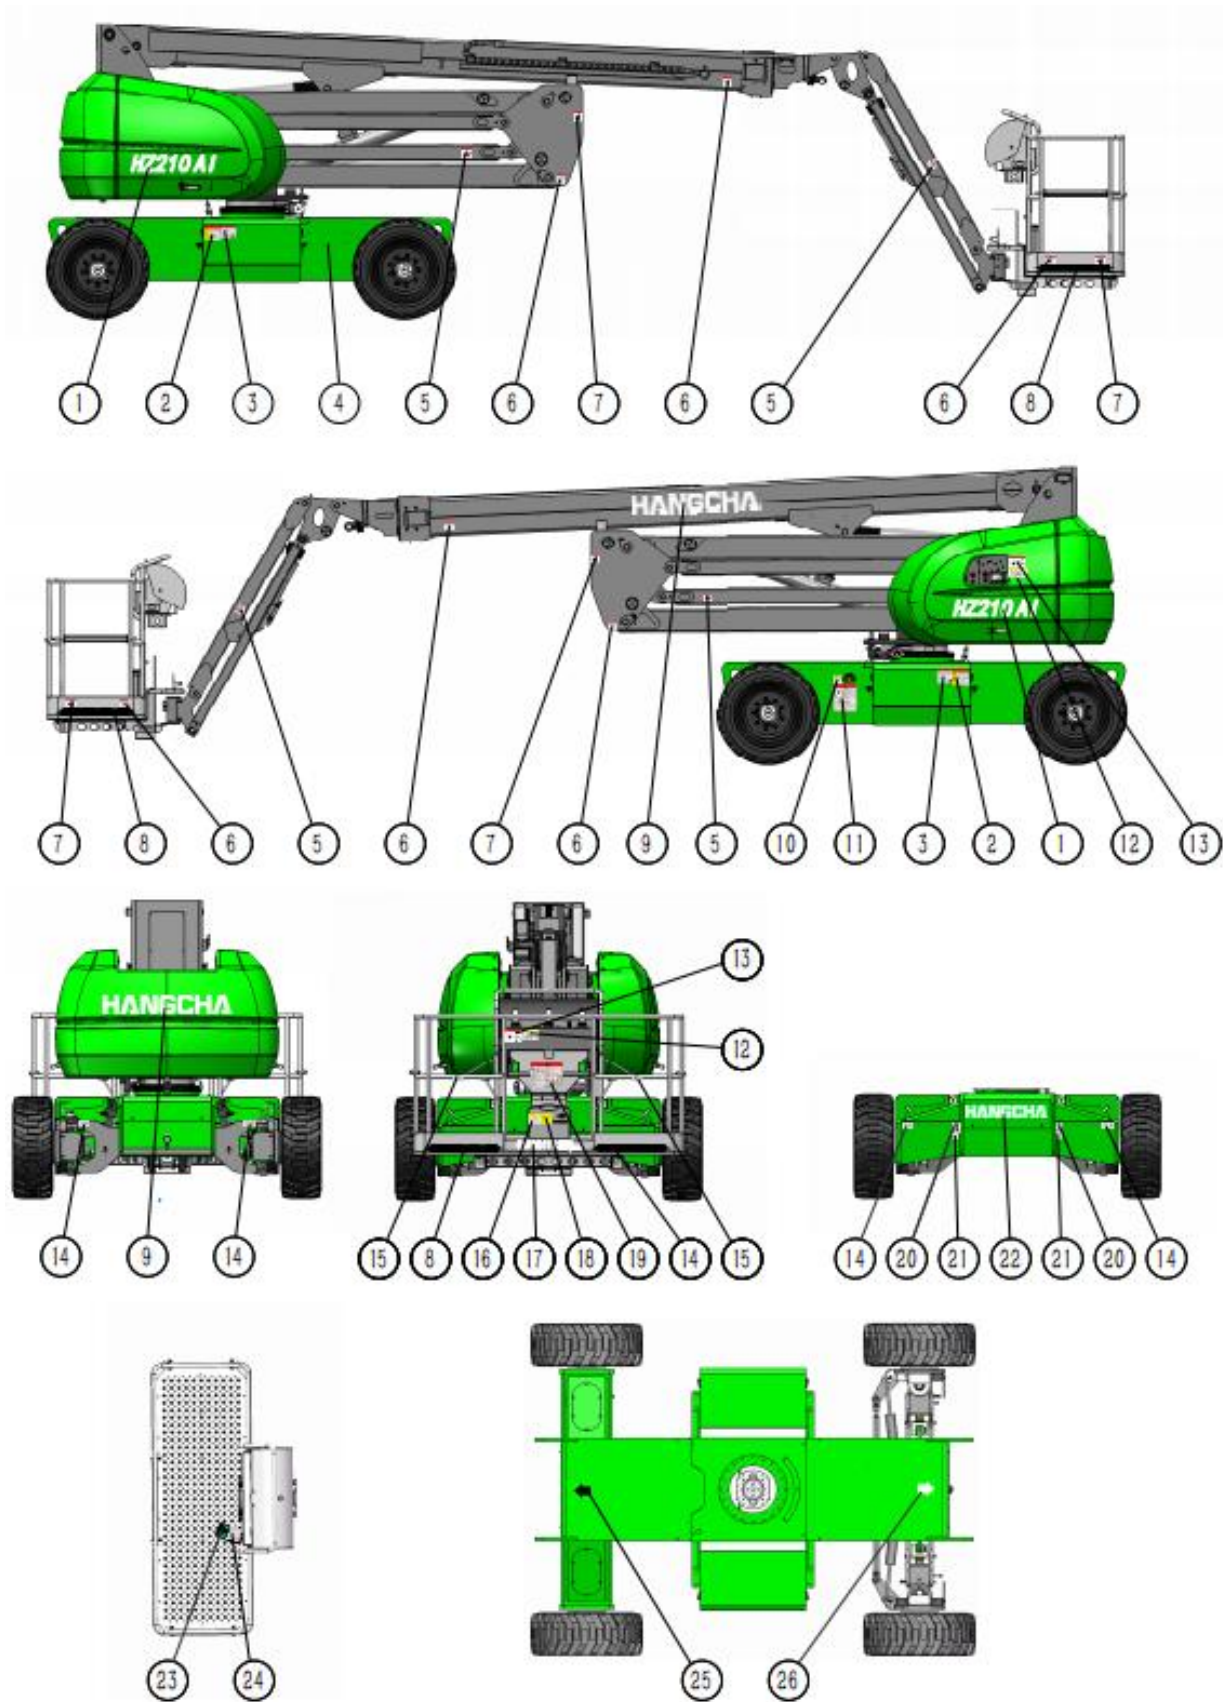


图 7-1 标识

序号 Item No.	代号 Part No.	名称 Description	数量 Qty	备注或适用车型 Remarks or Series No.	物料码 Code No.
1	GTHZ210C-020015-000	标签“文字 HZ210AI”	2		
2	GTWZ110-020017-000	标签	2		220200040048
3	GTHZ210C-020008-000	电池警示说明	2		220200040101
4	78XEN-910001-000	标牌	1		
5	GTHZ120-020014-000	标签“防夹手标签”	4		220200040009
6	GTHZ120-020016-000	标签“防压头标签”	6		220200040007
7	GTHZ120-020015-000	标签“防挤压标签”	4		220200040009
8	78XEN-020009-000	警示条	6		220200040091
9	GTHZ120-020021-000	标签“文字 HANGCHA”	2		220200080005
10	GTHZ210C-020009-000	断电说明标签	1		220200040097
11	GTHZ210C-020011-000	标签“日常检查说明”	1	中文	220200040096
12	GTHZ120-020008-000	标签“不要喷洒液体”	2		220200040003
13	GTHZ120-020005-000	标签“操作前说明”	2	中文	220200040004
14	GTHZ210C-020012-000	轮胎载荷标签	4		220200080024
15	78XEN-020024-000	安全锚点标签	4		220200040051
16	GTHZ210C-020004-000	标签“随机保存手册”	1	中文	220200040099
17	GTHZ210C-020003-000	额定载荷标签	1	中文	220200080023
18	GTHZ120-020004-000	标签“钥匙存放处”	1		220200080004
19	GTHZ210C-020005-000	标签“基本安全规则”	1		220200040100
20	R960-020035-001	起吊标签	4		200200150141
21	GTWZ110-020013-000	捆绑位置标签	4		220200050022
22	GTHZ120-020022-000	标签“文字 HANGCHA”	1		220200080006
23	GTHZ210C-020016-000	警示标签	1		
24	GTHZ210C-020010-000	脚踏开关警示	1		220200040098
25	GTHZ120-020007-000	标签“后”	1		220200080002
26	GTHZ120-020006-000	标签“前”	1		220200080001

HZ210 AI



HANGCHA



CAPACITY • 255 kg
• 350 kg (LTD)

